



# PRODUCT DESCRIPTION

## 1 Cooking surface layout

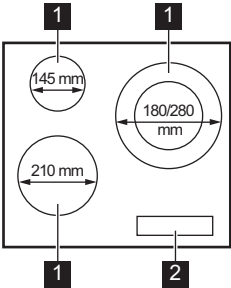





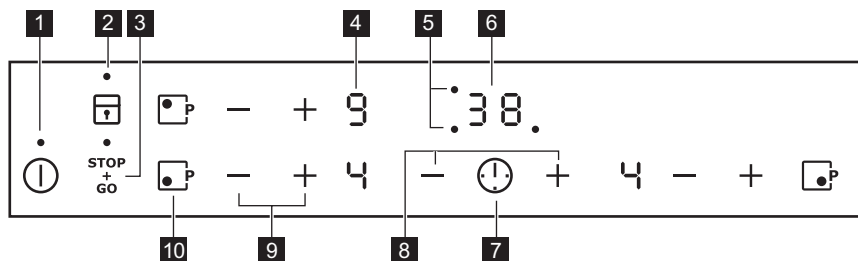- 1** Induction cooking zone
- 2** Control panel



## 2 Control panel layout








Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

Sensor field	Function	Comment
<b>1</b>	ON / OFF	To activate and deactivate the hob.
<b>2</b> 	Lock / The Child Safety Device	To lock / unlock the control panel.
<b>3</b> 	STOP+GO	To activate and deactivate the function.
<b>4</b> - +	Heat setting display	To show the heat setting.
<b>5</b> -	Timer indicators of cooking zones	To show for which zone you set the time.
<b>6</b> -	Timer display	To show the time in minutes.
<b>7</b> 	-	To select the cooking zone.
<b>8</b> / -	-	To increase or decrease the time.
<b>9</b> / -	-	To set a heat setting.
<b>10</b> 	Power function	To activate and deactivate the function.


## 3 Heat setting displays

Display	Description
	The cooking zone is deactivated.
	The cooking zone operates.
	STOP+GO function operates.

Display	Description
	Automatic Heat Up function operates.
	Power function operates.
 + digit	There is a malfunction.
	A cooking zone is still hot (residual heat).
	Lock / The Child Safety Device function operates.
	Incorrect or too small cookware or no cookware on the cooking zone.
	Automatic Switch Off function operates.

#### 4 Residual heat indicator

**WARNING!**

 There is a risk of burns from residual heat.

The induction cooking zones make the heat necessary for cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.