


CONTROL PANEL

1 Control Panel Description

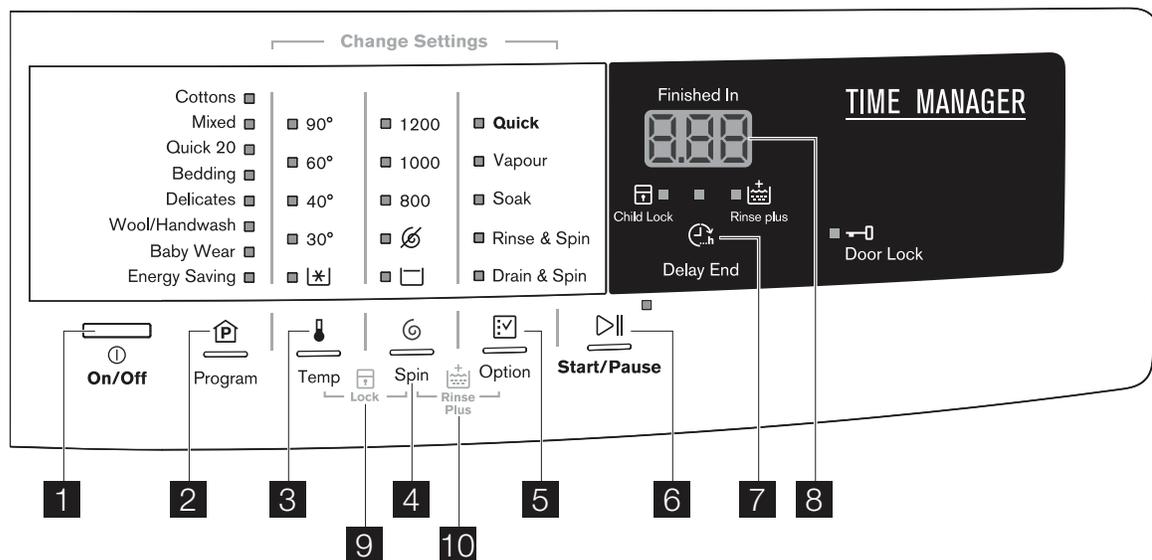

1 On/Off Button (⏻)

On/Off button is used to turn on and turn off your washing machine.

2 Program Touchpads (🏠)

Press this touchpad to select the washing program. The relevant light will light up. (For more information about washing program, please see on page 11-12)

3 Temperature Touchpad (🌡)

Press this touchpad repeatedly to increase or decrease the wash temperature if you want your laundry to be washed at a temperature different from the one proposed by the washing machine. The relevant light will light up.

i Different temperatures can be combined which is dependent on the program selected.

i **During a high temperature cycle you may notice vapour exiting from the detergent dispenser drawer of the washing machine, this is normal and there is no cause for alarm.**

4 Spin Touchpad (🌀)

Press this touchpad repeatedly to increase or decrease the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine. The relevant light will light up.

i Different spin speed can be combined which is dependent on the program selected.

🌀 No Spin

This option eliminates all the spin phases and adds 3 rinses to the Cottons program and 1 rinse for another programs.

📄 Rinse Hold

By selecting this option the water of the last rinse is not emptied out and the drum turns regularly to prevent the laundry creases. The door is still locked to indicate that the water must be emptied out.

i The door stays locked with the water in the drum. To drain the water refer to relevant paragraph on page 17.

5 Option Touchpad (📄)

Press the option touchpad, if you want your laundry to be washed with special functions. The relevant light will light up.

i Different options can be combined which is dependent on the program selected.

• **Quick**

With this option you can decrease the program duration. Use this option for items with light soil or items to refresh.

i This option will reduce the working time and the number of rinses.

If you need to add more rinse phases, press “⊗” + “☑” at the same time to add “Rinse Plus” option. (see page 10)

• **Vapour**

Select this option to add approximately 30 - 45 minutes of tumbling in vapour during the wash cycle. Vapour helps open fabric fibers up to allow laundry additives to release tough stains. The indicator of this option comes on.

i NOTE:


- Vapour may not necessarily be visible inside the drum during a vapour wash cycle. Vapour is created below the drum and allowed to naturally rise into the clothes.
- Vapour may not be present during the entire vapour wash cycle.
- Vapour function is more effective with half load.
- At the end of the Vapour cycle the clothes will be warmer, softer and detached from the drum.
- If Vapour option is selected, rinse temperatures will be elevated.
- During a vapour cycle you may notice vapour exiting from the drain hose of the washing machine, this is normal and there is no cause for alarm.

• **Soak**

This option allows you to soak heavily soiled clothes and stained items at the beginning of the wash before main washing phase.


This option will increase the duration of the program selected for about 50 minutes. And uses more water from normal wash. The process is as follows.

(1) fill water and turn the washing drum (this takes about 20 minutes)

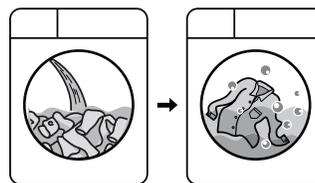

After press Start/Pause touchpad, the machine will start add water to the washing drum, which will start to rotate slowly to dissolve detergent and evenly distribute cloths.

(2) soak (this takes about 30 minutes.)

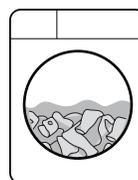

The machine will enter the process of soaking, The washing drum will stop and rotate once in a while in order to redistribute cloths.

(3) Once the soak process complete, the machine will check the water level again and will start the selected program and continue **by using the same soak water.**

If you **Do not** wish to use the soak water to wash cloth, please follow the steps below:

1. Press Start/Pause to pause the washing machine. Then press ON/OFF to turn off the machine.
2. Press ON/OFF again to start the machine, add detergent, and select the program of your choice. Press Start/Pause again to start the selected program. The machine will detect and drain the water in the washing drum out automatically and fill in water once again to be used for washing.

i Any temperature may be selected, but **COLD** () water is recommended with this cycle as hotter water may set some stains.

Use the amount of detergent recommended for a normal wash cycle. If desired, use a bleach or a soaking agent safe for the fabric, by pouring it into the detergent compartment.

• Rinse & Spin

With this option you can perform only a last rinse of a selected washing program.

If you set also the Rinse Plus function () the appliance adds two rinses.

If you set also the “No Spin ” option, the appliance only rinse.

• Drain & Spin

Use this option for very wet clothes to remove the water and spin.

If you set also the “No Spin ” option, the appliance only drains.

6 Start/Pause Touchpad ()

To start the selected program, press the “Start/Pause ()”.

To interrupt a program which is running, press the “Start/Pause ()” to pause the machine, the Start/Pause pilot light flashes.

To restart the program from the point at which it was interrupted, press the “Start/Pause ()” again, the Start/Pause pilot light will stop flashing.

7 Delay End Touchpad ()

Before you start the program, this option makes it possible to define the end of the washing program from minimum 3 hours to maximum 20 hours.

i NOTE:

If program duration is longer than 3 hours minimum Delay End option starts from 4 hours.

Press the Delay End touchpad to choose the end time as your wish. The display shows the number of hours and the indicator above the touchpad is on. This option must be selected after choosing the wash program, and before pressing the “Start/Pause” touchpad. For example, if the program duration of your selected program is 3.20 hours and you define the “Delay End” time to 6 hours. This means your wash program will finish in 6 hours. (See diagram)



After select Delay End time, press Start/Pause touchpad to start the program. Machine will then countdown and update time on the display every hours until it reaches the starting point of the wash cycle.

If you wish to modify or cancel Delay End option after starting the program, follow the steps below:

- set the washing machine to PAUSE by pressing “Start/Pause” touchpad;
- deselect this option by pressing Delay End once;
- press the “Start/Pause” to start the program.

8 Display

The display shows the following information:

Estimated time of the selected program



After selecting a program, the estimated time is displayed in hours and minutes (for example 3.01). The estimated time is calculated automatically on the basis of the maximum recommended load for each type of fabric.

After the program has started, the time remaining is updated every minute.

End Of Program



When the program is completed the display will show “0”.

Alarm Codes



In the event of operating problems, some alarm codes can be displayed, for example E20. (see “Troubleshooting”)

Incorrect Option Selection



If an option which is not compatible with the set wash program selected, the display will show “Err” and flash with 3 consecutive short beeps.

9 Child Lock Option (🔒)

Your appliance is provided with CHILD SAFETY LOCK which permits you to leave the appliance unsupervised with the door closed without having to worry that children might be injured by or cause damage to the appliance. Set this option after pressing the Start/Pause touchpad.

To set “Child Lock” option:

- Press and hold “🔒” and “🌀” touchpads at the same time until the LED “🔒” lights up.

i **The touchpads are locked (except for the On/Off “🔴” button).**

- To deactivate press and hold these 2 touchpads at the same time until the LED “🔒” goes off.

i This function remains enabled even after the appliance is switched off.

10 Rinse Plus Option (🚰)

Select this option to add 2 rinses to a program.

This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

i **This function increases the program duration.**

To set “Rinse Plus” option:

- Press and hold “🌀” and “🚰” touchpads at the same time until the LED “🚰” lights up.
- To deactivate press and hold these 2 touchpads at the same time until the LED “🚰” goes off.

i **This function remains enabled even after the appliance is switched off.**

2 Enabling/Disabling Buzzer Sounds

The buzzer sounds operate when:

- The program is completed.
- The appliance has a malfunction.

• If you want to disable the buzzer sound (except for event of appliance malfunction), press and hold “Programs 🏠” and “Temp 🔒” touchpads at the same time for 3 seconds, and listen for “BEEP, BEEP”.

• To enable the Buzzer press and hold these 2 touchpads at the same time for 3 seconds, and listen for “BEEP”.

3 Programs + Options

Program; Temp.	Program Description (type of load and soil level)	Maximum Dry Clothes Capacity (Max. kg)	Maximum Spin Speed (Max. RPM)	Options								
				No Spin	Rinse Hold	Quick	Vapour ¹⁾	Soak	Rinse & Spin	Drain & Spin	Delay End	Rinse +
Cottons; Cold () to 90 °C	White and coloured cotton with heavy level of soil.	8 kg	1200 RPM	■	■	■	■	■	■	■	■	■
Mixed; Cold () to 60 °C	Synthetic or mixed fabric items with normal level of soil.	4 kg	1200 RPM	■	■	■	■	■	■	■	■	■
Quick 20; 30 °C	Synthetic and mixed fabric items. Light soil and items to freshen up.	1.5 kg	800 RPM	■	■				■	■	■	
Bedding; Cold () to 40 °C	Special program for one synthetic blanket, duvet, bedspread and so on.	4 kg	800 RPM	■	■		■	■	■	■	■	■
Delicates; Cold () to 40 °C	Delicate fabrics as acrylics, viscose, polyester items with normal soil.	4 kg	1200 RPM	■	■	■	■	■	■	■	■	■
Wool/ Handwash; Cold () to 40 °C	Specially tested program for woollen garments bearing the “Pure new woollen, non-shrink, machine washable” label and hand washing fabrics.	2.5 kg	1000 RPM	■	■				■	■	■	

Program; Temp.	Program Description (type of load and soil level)	Maximum Dry Clothes Capacity (Max. kg)	Maximum Spin Speed (Max. RPM)	Options								
				No Spin	Rinse Hold	Quick	Vapour ¹⁾	Soak	Rinse & Spin	Drain & Spin	Delay End	Rinse +
Baby Wear; Cold ([✱]) to 40 °C	Baby cotton clothes and delicate knitting items with normal soil;	4 kg	1200 RPM	■	■		■	■	■	■	■	■
Energy Saving; 40 °C and 60 °C ²⁾	White and colourfast, cotton with normal soil. Set this program to have a good washing results and decrease the energy consump- tion. The time of the washing program is extended;	8 kg	1200 RPM	■	■	■	■	■	■	■	■	■

1) Vapour option can be combined with temperature 40 to 90 °C only.

2) "Energy Saving" program with 60 °C option selected is recommended for a full load of normally soiled cottons.