 



CONTROL PANEL

 1 Control Panel Description

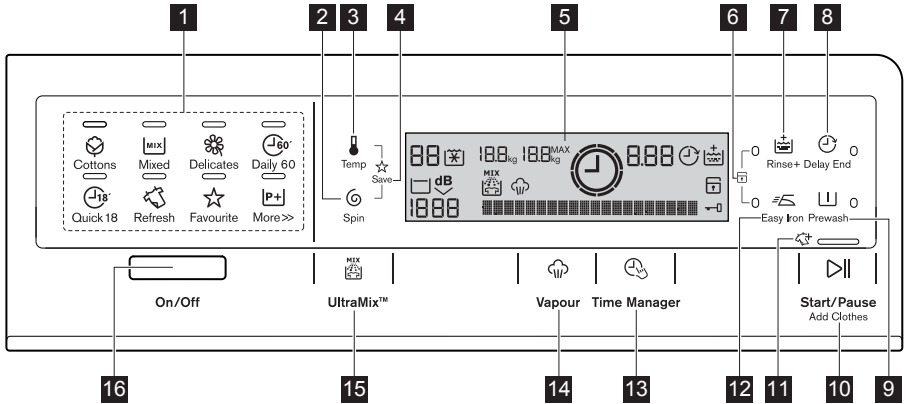





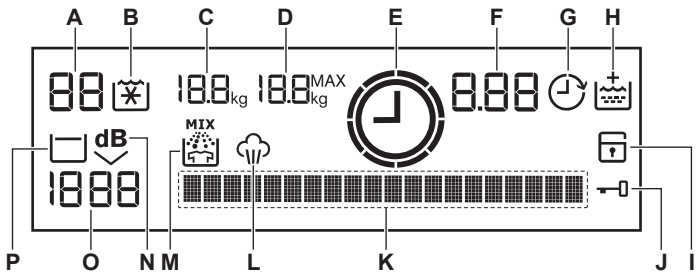






 

 

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Program Touchpads 2 Spin Selection Touchpad 3 Temperature Selection Touchpad 4 Save Favourite Program 5 Display 6 Child Lock (see page 14) 7 Rinse Plus Touchpad 8 Delay End Touchpad | <ul style="list-style-type: none"> 9 Prewash Touchpad 10 Start/Pause, Add Clothes Touchpad 11 Add Clothes Function Symbol 12 Easy Iron Touchpad 13 Time Manager Touchpad 14 Vapour Touchpad 15 UltraMix Touchpad 16 On/Off Button |
|--|---|

2 Display



- | | |
|---|---|
| <ul style="list-style-type: none"> A) Wash Temperature B) Cold Water Icon C) Load Weight D) Maximum Load Capacity Of Selected Program E) Time Manager Icon F) Washing Cycle Time/Delay End Time G) Delay End Icon H) Rinse Plus Icon I) Child Lock Icon J) Door Lock Icon | <ul style="list-style-type: none"> K) Text Bar L) Vapour Icon M) Ultramix System Icon N) Extra Silent Icon O) Spin Speed P) Rinse Hold Icon |
|---|---|
- i** "C" and "D" are only displayed when door is open.

3 Program Chart

Program ; Temperature range	Max. Load (Dry Clothes) ; Max. Spin Speed	Type of load and soil level
 Cottons ;  2) to 90 °C	11 kg ; 1400 rpm	White and coloured cotton. (Adjust wash time according to soil level. See Time Manager table on page 13)
 Mixed ;  to 60 °C	4 kg ; 1200 rpm	Synthetic or mixed fabric items. (Adjust wash time according to soil level. See Time Manager table on page 13)
 Delicates ;  to 40 °C	4 kg ; 1200 rpm	Delicate fabrics such as acrylics, viscose, polyester items. (Adjust wash time according to soil level. See Time Manager table on page 13)
 Daily 60 ; 30 °C to 60 °C	5.5 kg ; 1400 rpm	Coloured cotton e.g. shirts, blouses, towels and undergarments with normal level of soil.
 Quick 18 ; 30 °C	1.5 kg ; 800 rpm	Lightly soiled synthetics or mixed fabrics.
 Refresh	1.5 kg ; Clothes tumble in vapour.	This cycle removes odours and helps to dewrinkle the laundry.  Do not add detergent.
 Favourite	-	Recall you favourite program.
 More >> (Press this program touchpad repeatedly to find more program as list below)		
- Baby Care ;  to 40 °C	4 kg ; 1200 rpm	Baby cotton clothes and delicate knitting items with normal soil.
- Sports ; 30 °C	2.5 kg ; 800 rpm	A gentle program designed for mixed fabrics found in delicate clothes.
- Wool ;  to 40 °C	2 kg ; 1200 rpm	Specially tested program for woollen garments bearing the "Pure new woollen, non-shrink, machine washable" label.
- Energy Saver ; 40 °C and 60 °C ¹⁾	11 kg ; 1400 rpm	White and colourfast cotton. Set this program to have a good washing results and decrease the energy consumption. The time of the washing program is extended.
- Spin	11 kg ; 1400 rpm	To spin the laundry and drain the water in the drum.
- Rinse + Spin	11 kg ; 1400 rpm	To rinse and spin the laundry.
- Bedding ;  to 60 °C	3 kg ; 800 rpm	Special program for one synthetic blanket, duvet, bedspread and so on. (Adjust wash time according to soil level. See Time Manager table on page 13)
- Heavy Duty ; 40 °C to 90 °C	11 kg ; 1400 rpm	For a heavily soiled cotton wash load.
- Tub Clean ;	-	For cleaning the tub.

1) Energy Saver program with 60degC option selected is recommended to wash a normally soiled cotton load at rated load capacity.

2) Symbol " " represents Cold water.