


Unpacking

Check that the cooker hood has no damages. Transportation damages should immediately be reported to the company responsible for the transportation.

Damages, faults and eventually missing details should immediately be reported to the retailer. Take care of the packing materials so that small children cannot play with them.

Location

The hood is to be mounted on the wall. When installed, the hood must be not less than 60cm above electric burners or 70cm above gas or mixed-fuel burners.

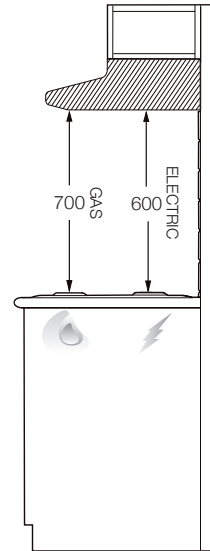

Electrical connection (not for UK)

Safety warnings for the electrician

Before connecting the appliance to the power supply, check that the voltage indicated on the rating plate corresponds to the mains power supply available. Appliances fitted with a plug can be connected to any standard power socket within easy access.

Should it be necessary to provide a fixed connection, the hood must only be installed by an electrician authorized by the local electricity board. When installing, an omnipolar disconnector with a distance of at least 3mm between contacts must be provided.

Fixed connection of the appliance must only be carried out by an authorized electrician.

Electrical connection (for UK only)

Safety warnings for the electrician

Connect the hood to the mains supply via a double pole switch which has 3mm minimum separation between the contacts.

The switch must be accessible at all times.


The following is valid in the United Kingdom only:

- The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol (\perp), or coloured green or green and yellow;
- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black, -
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

installation

Installation using the supplied drawer facia

Standard ducted installation calls for a door extension of 134mm whether the clients opts to use the supplied draw facia of the same dimensions as that supplied.

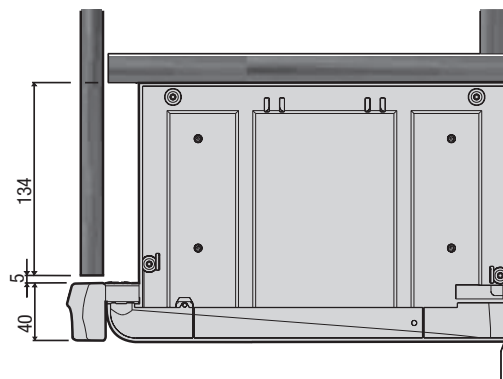


Recirculating vent installation


NOTE:

If the Rangehood is to be vented using the recirculating vent rather than standard ducting, the supplied drawer facia is not to be used and must be replaced with a client specific custom facia.


The custom drawer facia must be a minimum of 70mm deep as air expelled through the recirculating vent must be deflected upwards.

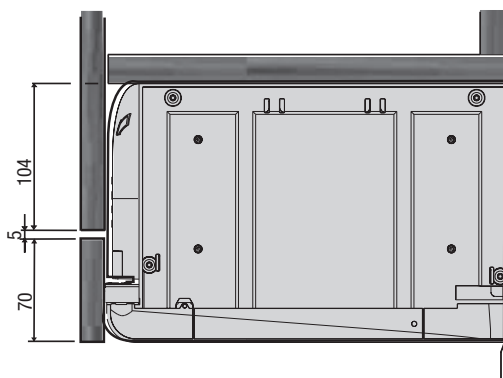

Setting of circulation air door - single fan models

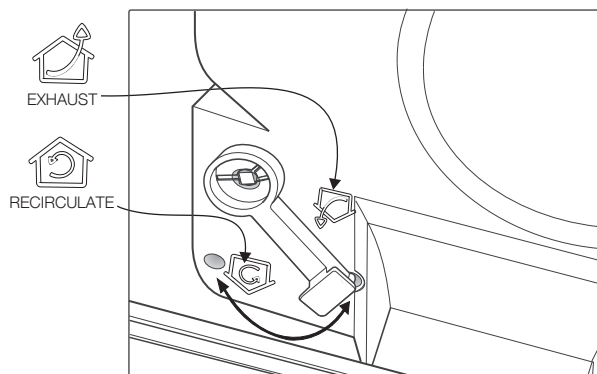


Setting of circulation air door - dual fan models

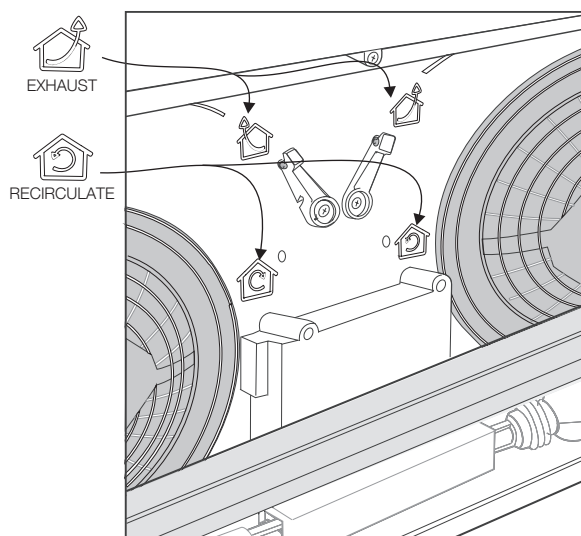

IMPORTANT:-
Set circulating modes before installing the hole plugs.


Ducted recirculating installation suggestion

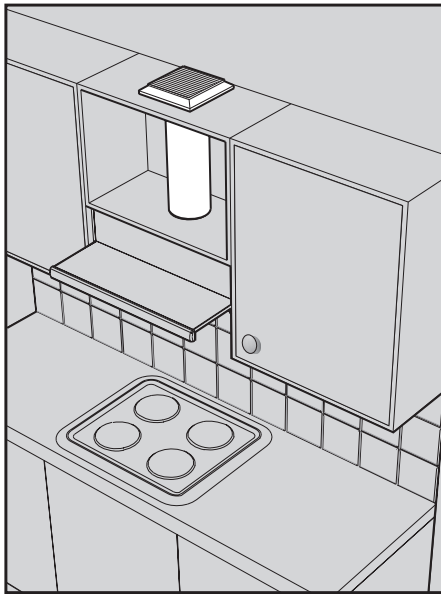

- Kindly enquire about the fittings with your local Service Center.

Operation


The operation of the lights and the three speed fans are controlled by the drawer action. (see diagram below)

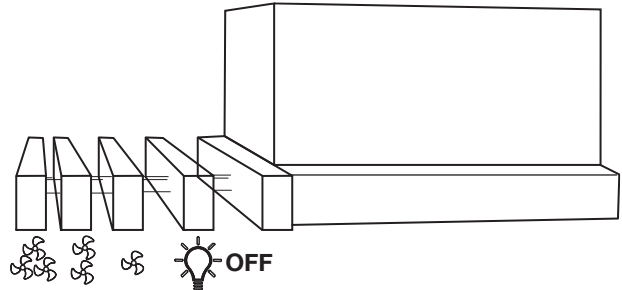

Charcoal filter

- The charcoal filter should only be used if you want to use the hood in the recirculation function.
- This filter cannot be cleaned or reused.
- **As a general rule, the activated charcoal filter should be changed once every four months.**
- **Fitting - refer below**
Fit one charcoal filter on the left and one on the right so to cover the plastic grids that protect the fan wheel.
- Always specify the hood model code number and serial number when ordering replacement filters. This information is shown on the registration plate located on the inside of the unit.
- The charcoal filter can be ordered from your local Service Center.

All models come with charcoal filter

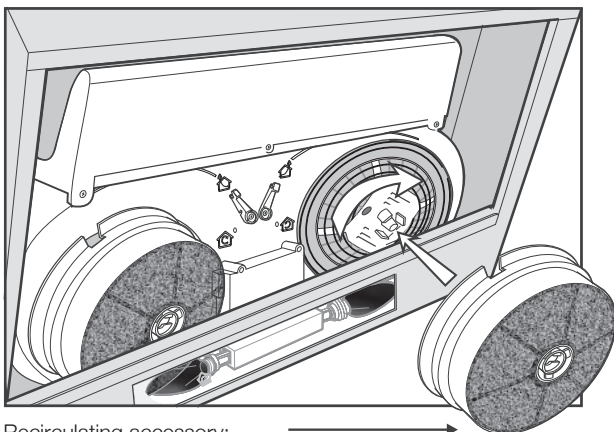

Recirculating accessory:  Carbon filter ARCFD for recirculating mode only.