


Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,
safety notices and shop for accessories.

1. **Open the camera app on your smartphone and point at the QR code to scan.**

Product Registration QR code is located on the top surface or underside of your appliance.

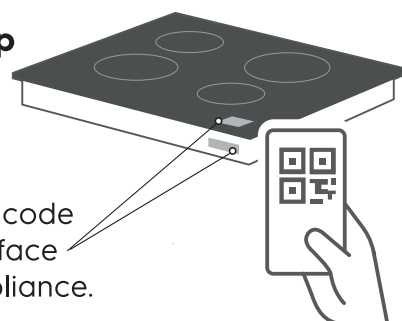

2. **Tap the notification or link to open the registration form.**

3. **Complete your details and enjoy peace of mind.**



Electrolux

CONGRATULATIONS

Dear customer,

Thank you for purchasing an Electrolux cooktop. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Intended use

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments
- Catering and similar non-retail applications

The symbols you will see in this booklet have these meanings:



WARNING

This symbol indicates information concerning your personal safety.



CAUTION

This symbol indicates information on how to avoid damaging the cooker or cabinet.



IMPORTANT

This symbol indicates tips and information about use of the cooker.



ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the cooker.

Record model and serial number here:

Model number: _____

Serial number: _____

NOTE: Model codes shown in this manual are the generic code. Your product will also include a two-letter suffix which denotes colour and series level.

CONTENTS

| | |
|---------------------------------------|-----------|
| SAFETY INSTRUCTIONS | 3 |
| INSTALLATION INSTRUCTIONS..... | 5 |
| TECHNICAL DATA..... | 7 |
| PRODUCT DESCRIPTION..... | 8 |
| OPERATING INSTRUCTIONS..... | 10 |
| HELPFUL HINTS AND TIPS | 13 |
| CARE AND CLEANING | 15 |
| TROUBLESHOOTING | 16 |
| WARRANTY | 19 |

Important Information that may impact your Manufacturer's Warranty

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

SAFETY INSTRUCTIONS

Before using your appliance

Before you use the appliance, we recommend that you read through the relevant sections of this manual, which provides the description of your appliance and its functions.

To avoid the risks that are always present when you use an appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

This appliance complies with the requirements of IEC 60335.1 and IEC 60335-2-6.



IMPORTANT

Check for any damage or marks. If you find the appliance is damaged or marked, you must report it within 7 days if you wish to claim for damage/marks under the manufacturer's warranty. This does not affect your statutory rights.

Information on disposal for users



ENVIRONMENT

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Children and vulnerable people safety



WARNING

Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.

Installation



WARNING

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Keep the minimum distance from the other appliances and units.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- The bottom of the appliance can get hot. We recommend to install a non-combustible separation panel under the appliance to prevent access to the bottom.

Electrical connection



WARNING

Risk of fire and electrical shock.

All electrical connections must be made by a qualified electrician. Before wiring make sure the mains terminal is not live.

- The appliance must be earthed.
- Make sure the appliance is installed correctly. Loose and incorrect plug and socket connections can make the terminal become too hot.
- The appliance must be installed correctly to ensure anti-shock protection.
- Cables from other electrical appliances must not touch the hot surface of the appliance.
- Other than the connection point in the terminal block, do not let the electrical supply cord touch the appliance or hot cookware. Ensure electrical supply cord is not tangled.
- Use a strain relief clamp on cable.
- Use the correct mains cable.

- Make sure there is no damage to the mains plug and to the mains cable. Contact the Service Centre or an electrician to change a damaged mains cable.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. Refer to IEC 60335.1 and IEC 60335-2-6. The isolation device must have a contact opening width of minimum 3mm.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

Use



WARNING

Risk of injury, burns or electric shock.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Do not use an external timer or a separate remote-control system to operate the appliance.
- Do not let the appliance stay unattended during operation.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Set the cooking zone to "off" after each use. Do not rely on the pan detector.
- Do not use the appliance as a work surface or as a storage surface.
- If there is a crack on the surface, disconnect power supply to prevent the electrical shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.



WARNING

Risk of fire or explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not try to extinguish a fire with water. Disconnect the appliance and cover the flame with a lid or a fire blanket.



WARNING

Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not put a hot pan cover on the glass surface of the hob.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Do not let cookware to boil dry.
- Be careful not to drop utensils or cookware on the glass, the glass surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Do not put aluminium foil on the appliance.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches on the glass ceramic. Always lift these objects up when you have to move them on the cooking surface.

Care and cleaning



WARNING

Risk of damage to the appliance.

- Switch off the appliance and let it cool down before cleaning.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

INSTALLATION INSTRUCTIONS

Built-in appliances

- Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.


Connection cable

- The hob is supplied with a connection cable.
- If the cable is damaged or needs replacing, this should be done by a qualified person. Contact your local service center.
- The cable conditions minimum 3x4mm² with an all-pole 32A breaker. The cable must be in accordance with local standards and IEC 60335. The terminal screws tightened securely.

To attach the seal

- Clean the worktop in the area of the cut out section.
- Bond the seal stripe supplied on the lower edge of the appliance along the outer edge of the glass ceramic. Do not extend it. Let stay the cut ends in the middle of one side. When you cut it to length (add some mm), push the two ends together.

Assembly

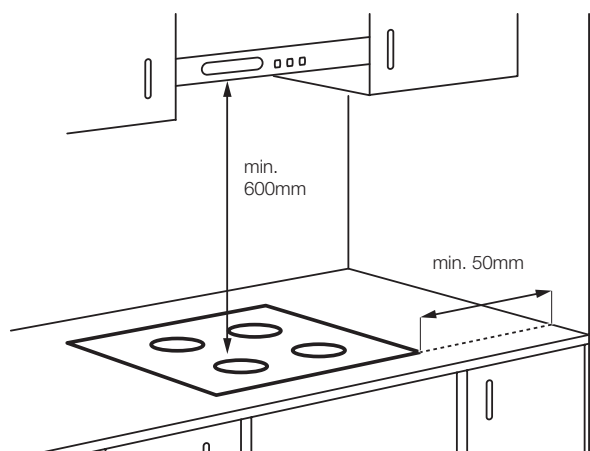

NOTE: The clearance must meet or exceed the minimum recommended for both the rangehood and cooktop. Refer to the rangehood installation manual.






WARNING

Refer to "Safety instructions" chapter.








IMPORTANT

Before the installation, note down the serial number (Ser. Nr.) from the rating plate at the front of this manual. The rating plate of the appliance is on its lower casing.

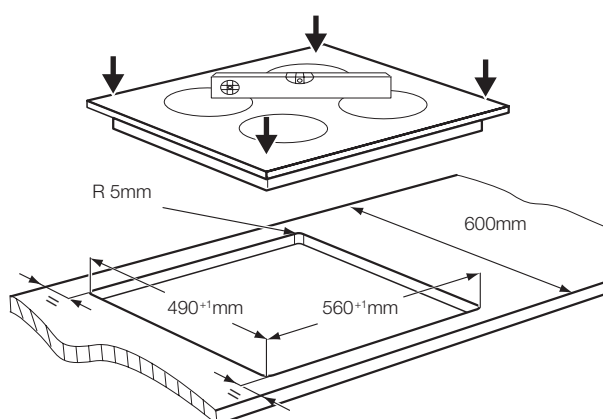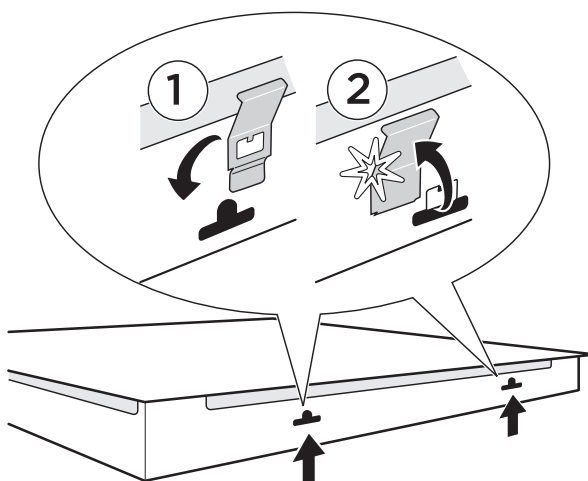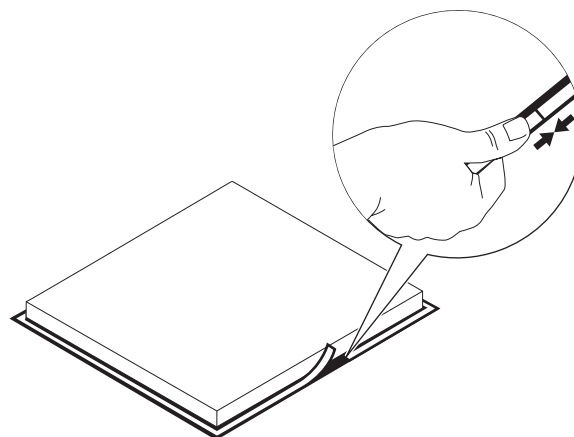

i IMPORTANT

It is recommended to centre the bench cutout with equal distance front and back as shown but the product has also been certified to be installed with no clearance between the rear edge of the cooktop glass and rear wall if required. In doing so, installers still need to leave sufficient clearance to take into account that the glass dimensions are larger than the cut out.

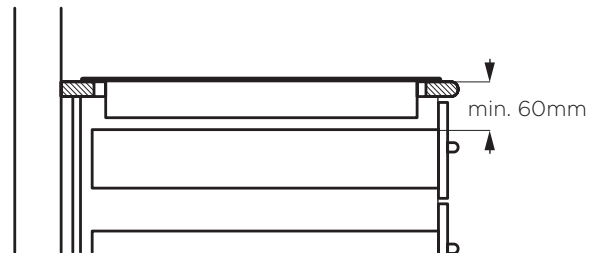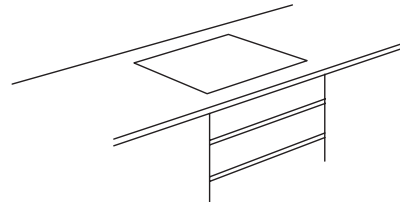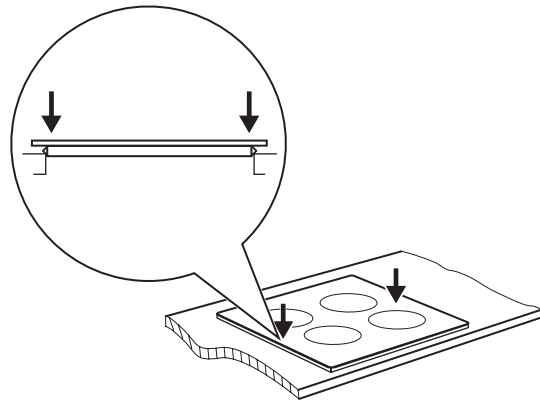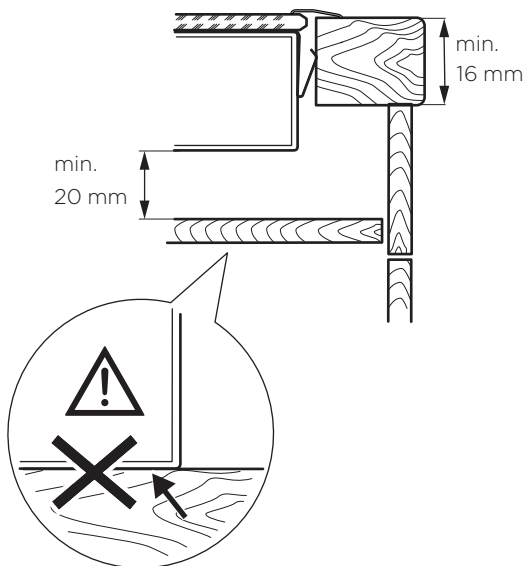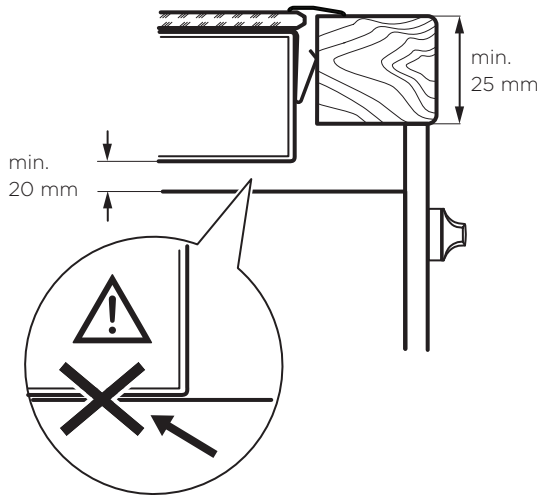


TECHNICAL DATA

| MODEL | EH16322BF |
|-----------------------------------|-------------------------------|
| PNC | 949163544 (SG) 949163545 (MY) |
| Product dimensions (W x D x H) mm | 590 x 520 x 51 |
| Cut-out dimensions (W x D) mm | 560 x 490 |
| Voltage (volts) | 220-240 |
| Frequency (Hz) | 50 |
| Current (Amps) | 15 |
| Total power (Watts) | 3500 |
| No. of cooking zones | 3 |
| Left front | 1400/2500W(140mm) |
| Left rear | 1800/2800W(180mm) |
| Right front | N/A |
| Right rear | N/A |
| Centre | N/A |
| Right | 2300/3200W(240mm) |


PRODUCT DESCRIPTION

EH16322BF

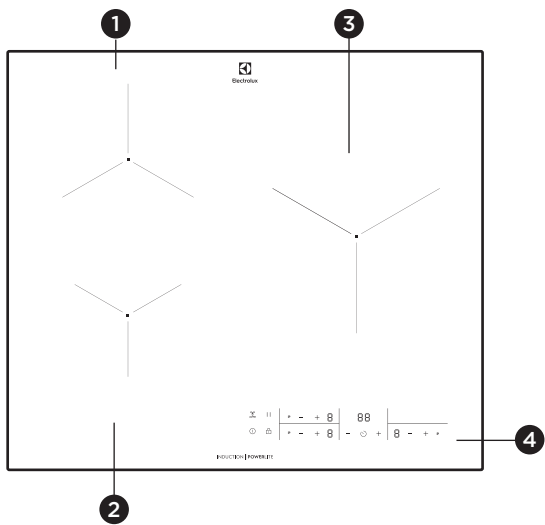




- 1 Induction cooking zone 1800 W, with Power function 2800 W (minimum cookware diameter =150 mm).
- 2 Induction cooking zone 1400 W, with Power function 2500 W (minimum cookware diameter =125 mm).
- 3 Induction cooking zone 2300 W, with Power function 3200 W (minimum cookware diameter =205 mm).
- 4 Control panel

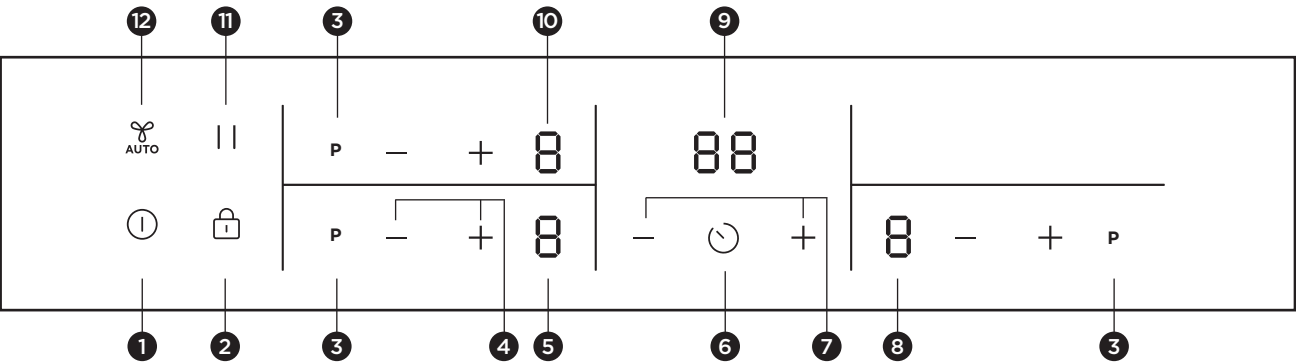









Control panel - EH16322BF



Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

| | SENSOR FIELD | FUNCTION |
|----|---|--|
| 1 | ① (ON/OFF) | It activates and deactivates the appliance |
| 2 |  | It locks/unlocks the control panel |
| 3 | P | It activates the PowerBoost function |
| 4 | — / + | It increases or decreases the heat setting |
| 5 | A heat setting display | It shows the heat setting of the left front (LF) cooking zone |
| 6 |  | To set the timer function |
| 7 | — / + | It increases or decreases the time |
| 8 | A heat setting display | It shows the heat setting of the right cooking zone |
| 9 | The timer display | It shows the time in minutes |
| 10 | A heat setting display | It shows the heat setting of the left rear (LR) cooking zone |
| 11 | II (Pause) | Sets all operating zones to a keep warm setting |
| 12 |  AUTO | To activate and deactivate the manual mode of the Hob ² Hood function |

Heat setting displays

| DISPLAY | DESCRIPTION |
|---|---|
|  | The cooking zone is deactivated. |
|  | The Keep Warm function operates. |
|  | The cooking zone operates. |
|  | The Automatic Heat-up function operates. |
|  | The cookware is incorrect or too small, or there is no cookware on the cooking zone. |
|  + digit | Fault code |
|  | OptiHeat Control (3-step residual heat indicator): continue cooking / keep warm / residual heat |
|  | The Lock/Child Safety device operates. |
|  | The PowerBoost function operates. |
|  | The Automatic Switch-Off operates. |

OPERATING INSTRUCTIONS

Activation and deactivation

Touch **1** (ON/OFF) for 1 second to activate or deactivate the appliance.

Automatic switch off

The function deactivates the appliance automatically if:


- All cooking zones are deactivated (**0**).
- You do not set the heat setting after you activate the appliance.
- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc). The sound operates some time and the appliance deactivates. Remove the object or clean the control panel.
- The appliance become too hot (e.g. when a saucepan boils dry). Before you use the appliance again, the cooking zone must be cool.
- You use incorrect cookware. The symbol **F** comes on and the cooking zone deactivates automatically after 2 minutes.
- You do not deactivate a cooking zone or change the heat setting. After some time, **0** comes on and the appliance deactivates. See the Heat Setting display table below.

The times of Automatic Switch Off

| HEAT SETTING | COOKING ZONE DEACTIVATES AFTER |
|---------------------|--------------------------------|
| 1 - 2 | 6 hours |
| 3 - 4 | 5 hours |
| 5 | 4 hours |
| 6 - 9 | 1.5 hours |

The heat setting

Touch **+** or **-** repeatedly to select the desired heat setting. The display shows the heat setting (levels 1-9).

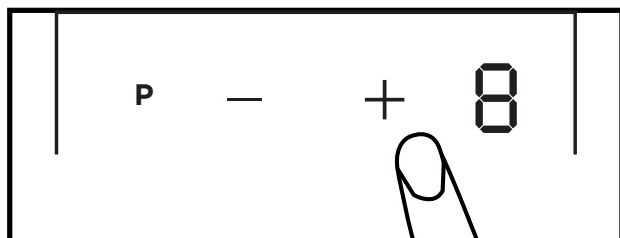


Heat setting 1: lowest setting.

Heat setting 9: highest setting.

Automatic heat up

You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the illustration), and then decreases to the necessary heat setting.

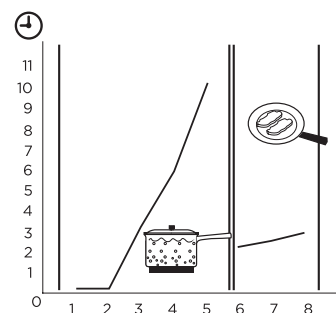

To activate the function the cooking zone must be cold.

To activate the function for a cooking zone:

Touch **P** (**P** comes on). Immediately touch **+** (**8** comes on). Immediately touch **-** until the correct heat setting comes on. After 3 seconds **8** comes on.

To deactivate the function: Touch **-**.

OptiHeat Control (3-step residual heat indicator)



WARNING

1 / **2** / **3** Risk of burns from residual heat!

OptiHeat Control shows the level of the residual heat. The induction cooking zones make the heat necessary for cooking directly in the bottom of the cookware. The glass ceramic is hot from the heat of the cookware.

PowerLite induction

The PowerLite induction hob provides a hassle-free way to transition from your current electric hob to induction hob, without having to upgrade your existing wiring, if your current wiring can support 15amp (3.5kW).

When using more than one zone at the same time, the power sharing feature will activate to reduce the overall load. This may restrict the maximum heat level achievable for each zone.

It may be necessary to lower the settings on other zones before increasing the heat setting or activating an additional cooking zone.

The last assigned zone setting will be retained, and the other settings will be overridden. These settings will flash on the control panel display and will be automatically adjusted to the highest possible heat level within the power limit.

Model number:

EHI6322BF 15amp (3.5kW)

PowerBoost function

The PowerBoost function makes more power available to the induction cooking zones. To activate, touch **P** until **P** comes on. To deactivate, touch **P** adjacent to the element you want to control.

PowerBoost is available on any zone when 1 zone is in use.


PowerBoost will last for 10 minutes, except for smallest zone which will last for 4 minutes. It will automatically switch to level 9 afterwards.

POWERLITE EH16322BF




15amp (3.5kW)

When using more than one zone at the same time, the power sharing feature will activate to reduce the overall load. This may restrict the maximum heat level achievable for each zone.

It may be necessary to lower the settings on other zones before increasing the heat setting or activating an additional cooking zone.

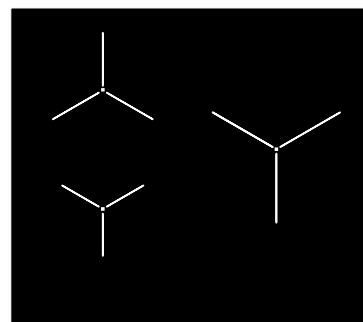

The last assigned zone's heat setting will be retained. The other settings may be adjusted if necessary, to the highest possible heat level within the power limit.

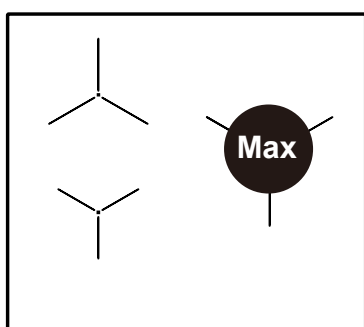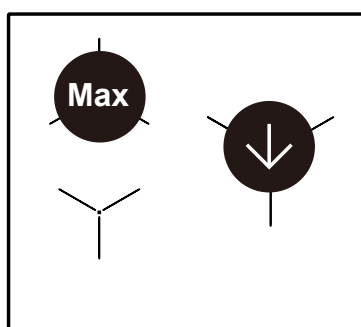
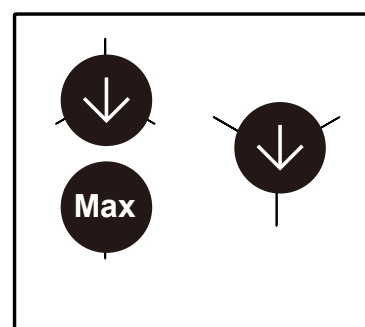
**One zone in use****Two zones in use****Three zones in use**

The setting(s) being adjusted will toggle on the control panel, between the original heat level and the new heat level for approximately one minute before stabilising at the new heat level.

Here are some examples of maximum heat setting combinations when using multiple cooking zones at the same time.




 
 
 
 
 
 
 


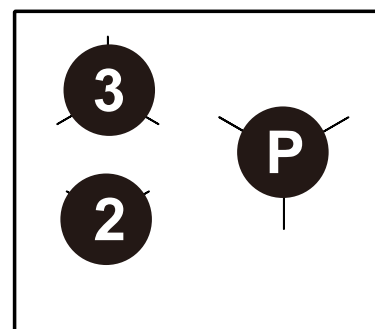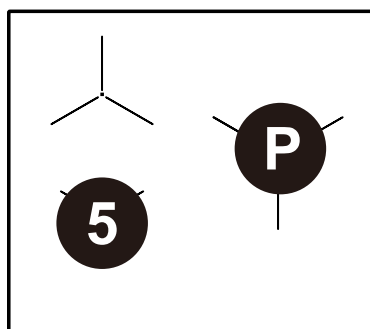
Note:
PowerBoost is available on any zone when only one zone is activated.

 

 


Count down timer

Use the Count Down Timer to set how long the cooking zone operates for only this one time. Set the Timer after the selection of the cooking zone. You can set the heat setting before or after you set the timer.


- To set the cooking zone: Touch  repeatedly until the indicator of the required cooking zone comes on.
- Starting the Count Down Timer: Touch  of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone flashes slower, the time counts down.
- Checking the remaining time: Select the cooking zone with . The indicator of the cooking zone flashes faster. Display shows the remaining time.
- Changing the Count Down Timer: Select the cooking zone with , then touch  or .
- Stopping the timer: Select the cooking zone with , then touch . The remaining time counts backwards to 00. The indicator of the cooking zone goes out. To switch off you can also touch  or  at the same time.
- When the time elapses, the sound operates and 00 flashes. The cooking zone switches off.
- Stopping the sound: Touch .

Minute minder

 


You can use the timer as a Minute Minder while cooking zones are not operating. Touch , then touch  or  of the timer to select the time. When the time elapses, the sound operates and 00 flashes.

Pause (models with independent pause button)

The Pause function sets all cooking zones that are operating to the lowest heat setting .



When  (Pause) operates, you cannot change the heat setting.


The Pause function does not stop the timer function.

- To activate this function touch  (Pause). The  symbol comes on.
- To deactivate this function touch  (Pause). The heat setting that you set before comes on.

Locking the control panel

When the cooking zones operate, you can lock the control panel, but not **ON/OFF**. It prevents an accidental change of the heat setting.

First set the heat setting. To start this function touch . The symbol  comes on for 4 seconds. The Timer stays on.


To stop this function, touch . The heat setting that you set before comes on. When you stop the appliance, you also stop this function.

The child safety device



This function prevents an accidental operation of the appliance.

To activate the child safety device

 

- Activate the appliance with **ON/OFF**. Do not set the heat settings.

- Touch  (Pause) for 4 seconds.
- Deactivate the appliance with **ON/OFF**.

To deactivate the child safety device

- Activate the appliance with **ON/OFF**. Do not set the heat settings. Touch  (Pause) for 4 seconds. The symbol  comes on.
- Deactivate the appliance with **ON/OFF**.

To override the child safety device for only one time

- Activate the appliance with **ON/OFF**.
- Touch  (Pause) for 4 seconds. The symbol  comes on. Set the heat setting in 10 seconds. You can operate the appliance.
- When you deactivate the appliance with **ON/OFF**, the child safety device operates again.

Hob²Hood

This is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infra-red signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan from the hob manually.

IMPORTANT

For most of the hoods the remote system is originally deactivated. Activate it before you use the function. For more information refer to hood user manual.

Operating the function automatically

The default automatic mode from the factory is H5. You can change the automatic mode by following the instructions below. When you activate the hob, the hood will adjust the fan speed automatically. Please note the table below is a guide, the fan speed varies depending on the temperature measured on the cooking zones of the cooktop, which can be affected by the heat setting(s) selected as well as the size and volume of what you are cooking.





Automatic modes

| | AUTOMATIC LIGHT | BOILING ¹⁾ | FRYING ²⁾ |
|-----------------------|-----------------|-----------------------|----------------------|
| Mode H0 | Off | Off | Off |
| Mode H1 | On | Off | Off |
| Mode H2 ³⁾ | On | Fan speed 1 | Fan speed 1 |
| Mode H3 | On | Off | Fan speed 1 |
| Mode H4 | On | Fan speed 1 | Fan speed 1 |
| Mode H5 | On | Fan speed 1 | Fan speed 2 |
| Mode H6 | On | Fan speed 2 | Fan speed 3 |

- 1). The hob detects the boiling process and activates fan speed in accordance with automatic mode.

- 2). The hob detects the frying process and activates fan speed in accordance with automatic mode.
- 3). This mode activates the fan and the light and does not rely on the temperature.

Changing the automatic mode

1. Deactivate the appliance.
2. Touch **ON/OFF** for 3 seconds. The display comes on and goes off.
3. Touch  for 3 seconds.
4. Touch  a few times until  comes on.
5. Touch  of the Timer to select an automatic mode.



IMPORTANT





To operate the hood directly on the hood panel, deactivate the automatic mode of the function.



IMPORTANT

When you finish cooking and deactivate the hob, the hood fan may still operate for a certain period of time. After that time the system deactivates the fan automatically and prevents you from accidental activation of the fan for the next 30 seconds.

Operating the fan speed manually

You can also operate the function manually. To do that touch  **AUTO** when the hob is active. This deactivates automatic operation of the function and allows you to change the fan speed manually. When you press  **AUTO** you raise the fan speed by one. When you reach an intensive level and press  **AUTO** again you will set fan speed to 0 which deactivates the hood fan. To start the fan again with fan speed 1, touch  **AUTO**.



IMPORTANT

To activate automatic operation of the function, deactivate the hob and activate it again.

Activating the light

You can set the hob to activate the light automatically whenever you activate the hob. To do so set the automatic mode to H1 – H6.



IMPORTANT


The light on the hood deactivates 2 minutes after deactivating the hob.

Hints and Tips for Hob²Hood function

When you operate the hob with Hob²Hood function:

- Protect the hood panel from direct sunlight.
- Do not spot halogen light on the hood panel.
- Do not cover the hob control panel.
- Do not interrupt signal between the hob and the hood (for example with a hand or a cookware handle or a tall pot).

(Hood in the picture is only an example).

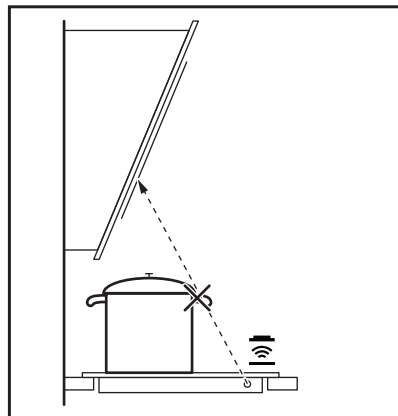

HELPFUL HINTS AND TIPS



IMPORTANT

Use the induction cooking zones with correct cookware.

Cookware for induction cooking zones



IMPORTANT

For induction cooking zones a strong electromagnetic field creates the heat in the cookware very quickly.

Cookware material

 
- **Correct:** cast iron, steel, enamelled steel, stainless steel, the bottom made of multi-layer (with correct mark from a manufacturer).
- **Not correct:** aluminium, copper, brass, glass, ceramic or porcelain.

FIND THE RIGHT COOKWARE

Only magnetic pots and pans work with induction.

Check to see if your cookware is compatible: Place a magnet on the bottom of your pot or pan - if it clings firmly, the cookware will work with your cooktop.

Choose the right size pot or pan for the right cooking zone.



☒ **MAGNET STICKS**

Cookware base material has good magnetic characteristics



☐ **MAGNET FALLS**

Cookware base material is non-magnetic

Cookware is correct for an induction hob if ...

- Some water boils very quickly on a zone set to the highest heat setting.
- A magnet pulls on to the bottom of the cookware.



IMPORTANT

The bottom of the cookware must be as thick and flat as possible. Cookware dimensions: induction cooking zones adapt to the dimension of the bottom of the cookware automatically to some limit.

Energy saving



ENVIRONMENT

- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.




IMPORTANT

It may happen that other remote controlled appliances may block the signal. To avoid it do not operate the remote of the appliance and the hob at the same time.

Rangehoods with the Hob²Hood function

To find the full range of rangehoods which work with this function refer to our consumer website. The Westinghouse rangehoods that work with this function must have the

symbol  **AUTO**.

Examples of cooking applications


The relation between the heat setting and the cooking zone consumption of power is not linear. When you increase the heat setting it is not proportional to the increase of the cooking zone consumption of power.

It means that the cooking zone with the medium heat setting uses less than half the power of the high setting.



IMPORTANT

The data in the table is for guidance only.

| HEAT SETTING | USE TO: | TIME | HINTS |
|---|---|-------------|--|
|  1 | Keep food warm | as required | Put a lid on a cookware |
| 1-2 | Hollandaise sauce, melt: butter, chocolate, gelatine | 5-25 min | Mix from time to time |
| 1-2 | Solidify: fluffy omelettes, baked eggs | 10-40 min | Cook with a lid on |
| 2-3 | Simmer rice and milk based dishes, heating up ready-cooked meals | 25-50 min | Add the minimum twice as much liquid as rice, mix milk dishes part procedure through |
| 3-4 | Steam vegetables, fish, meat | 20-45 min | Add some tablespoons of liquid |
| 4-5 | Steam potatoes | 20-60 min | Use max. 1/4 L water for 750g of potatoes |
| 4-5 | Cook larger quantities of food, stews and soups | 60-150 min | Up to 3 L liquid plus ingredients |
| 6-7 | Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts | as required | Turn halfway through |
| 7-8 | Heavy fry, hash browns, loin steaks, steaks | 5-15 min | Turn halfway through |
| 9 | Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep-fry chips | | |

The PowerBoost function is best to heat up large quantities of water.

CARE AND CLEANING

Care and cleaning

Clean the appliance after each use. Always use cookware with clean bottom.

IMPORTANT

Scratches or dark stains on the glass ceramic have no effect on how the appliance operates.

To remove the dirt:

1. **Remove immediately:** melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance. Use a special scraper for the glass. Put the scraper on the glass surface at an acute angle and move the blade on the surface.

Remove after the appliance is sufficiently cool: limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaning agent for glass ceramic or stainless steel.

2. Clean the appliance with a moist cloth and some detergent.
3. At the end **rub the appliance dry with a clean cloth.**




If the deposit is minimal, simply wipe off with a dry cloth.



If the deposit is more significant, clean off with a moist, soapy sponge and rinse off.



If the deposit does not clean off easily, use a non-abrasive scratch pad and a specially adapted glass-ceramic cleaning product

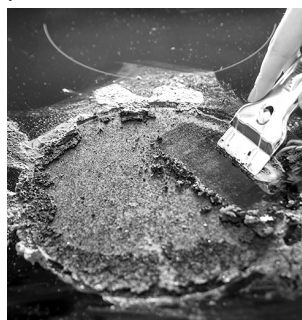

If the deposit cannot be removed with any of the above mentioned methods, use a razor blade scraper, specially designed for glass-ceramic cooktops.



Having successfully cleaned the cooktop, apply a glass ceramic cooktop conditioner which will protect the cooktop surface against any future stains, with a dry cloth or equivalent.

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | REMEDY |
|--|--|---|
| You cannot activate or operate the hob. | The hob is not connected to an electrical supply or it is connected incorrectly. | Check if the hob is correctly connected to the electrical supply. Refer to the connection diagram. |
| | The fuse is blown. | Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician. |
| | You do not set the heat setting for 10 seconds. | Activate the hob again and set the heat setting in less than 10 seconds. |
| | You touched 2 or more sensor fields at the same time. | Touch only one sensor field. |
| | There is water or fat stains on the control panel. | Clean the control panel. |
| An acoustic signal sounds and the hob deactivates. An acoustic signal sounds when the hob is deactivated. | You put something on one or more sensor fields. | Remove the object from the sensor fields. |
| The hob deactivates. | You put something on the sensor field. | Remove the object from the sensor field. |
| Residual heat indicator does not come on. | The zone is not hot because it has been operated only for a short time or the sensor is damaged. | If the zone has been operated sufficiently long to be hot, speak to an Authorised Service Centre. |
| Hob ² Hood does not work. | You covered the control panel. | Remove the object from the control panel. |
| | You use a very tall pot which blocks the signal. | Use a smaller pot, change the cooking zone or operate the hood manually. |
| Automatic Heat Up does not operate. | The zone is hot. | Let the zone become sufficiently cool. |
| | The highest heat setting is set. | The highest heat setting has the same power as the function. |
| The heat setting changes between two levels. | Power management operates. | Refer to "Operating instructions". |
| The sensor fields become hot. | The cookware is too large or you put it too near to the controls. | Put large cookware on the rear zones, if possible. |
| There is no sound when you touch the panel sensor fields. | The sounds are deactivated. | Activate the sounds. Refer to "Operating instructions". |
|  comes on. | Child Safety Device or Lock operates. | Refer to "Operating instructions". |

| PROBLEM | POSSIBLE CAUSE | REMEDY |
|--|---|---|
| F comes on. | There is no cookware on the zone. | Put cookware on the zone. |
| | The cookware is unsuitable. | Use suitable cookware. Refer to "Hints and tips". |
| | The diameter of the bottom of the cookware is too small for the zone. | Use cookware with correct dimensions. Refer to "Technical data". |
| F and I appear alternately | The power is too low due to unsuitable cookware or an empty pot. | "Use the appropriate type of cookware. Refer to "Hints and Tips" and "Technical Data". Do not activate any zone with an empty pot on it." |
| F and 2 appear alternately | The pot is empty or contains some liquid other than water, e.g. oil. | Avoid using the function with liquids other than water. |
| E and a number come on. | There is an error in the hob. | Deactivate the hob and activate it again after 30 seconds. If E comes on again, disconnect the hob from the electrical supply. After 30 seconds, connect the hob again. If the problem continues, speak to an Authorised Service Centre. |
| You can hear a constant beep noise. | The electrical connection is incorrect. | Disconnect the hob from the electrical supply. Ask a qualified electrician to check the installation. |

If you cannot find a solution...

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Give the data from the rating plate. Give also three digit letter code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on.

Make sure, you operated the hob correctly. If not the servicing by a service technician or dealer will not be free of charge, also during the warranty period. The instructions about the Service Centre and conditions of guarantee are in the guarantee booklet.

The noises during operation

If you can hear

- **crack noise:** cookware is made of different materials (Sandwich construction).
- **whistle sound:** you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction).
- **humming:** you use high power levels.
- **clicking:** electric switching occurs.
- **hissing, buzzing:** the fan operates.

The noises are normal and do not indicate a malfunction of the appliance.

If you are unfamiliar with induction units, please first compare the operating sounds of a demonstration model at your retailer before calling for service. If a service call is placed and the sounds are normal, you will be charged for the visit.

FAQs

Display is flashing

This is normal during power sharing mode. The power for the zone is automatically reduced to ensure the maximum power available is not exceeded.

The display is switching between 2 power settings

The heat setting display of the reduced zones changes between the initially selected heat setting and the reduced heat setting, it will stop switching after about 1 minute. The cooking zones will continue operating with the reduced heat setting. Change the heat setting of the cooking zones manually, if necessary.

Power level for zone reduces when activating another zone

This is normal during power sharing mode. The power for the zone is automatically reduced to ensure the maximum power available is not exceeded.

The power level is showing '0'

Power is not available to this zone. This may be due to other zones had maximised the power limit.

PowerBoost switches off while cooking

PowerBoost will last for 10 minutes for all zones, except for the smallest zone (Ø140mm) which will last for 4 minutes. It will automatically switch to level 9 afterwards.

Cannot activate PowerBoost in 2 or more zones

PowerBoost can only be activated for one zone at a time. Refer to "Operating instructions", page 11.

Electrolux Warranty

We, Electrolux, undertake that if within warranty date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- o The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- o The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer instructions.
- o The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorized by us.

All service work under this warranty must be undertaken by an authorized Electrolux Service Center. Any appliance or defective part replaced shall become the Company property. This warranty is in addition to your statutory and other legal rights. This warranty does not include maintenance, like cleaning of hood.

The manufacturer waives all liability for failure to observe the instructions for the appropriate installation, maintenance and use of the appliance.

| | |
|---|--|
| <p>Indonesia Consumer Care Hotline: 0804 111 9999 PT. Electrolux Indonesia Electrolux Building, Jl.Tanah Abang 2 No.42, Petojo Selatan, Gambir Jakarta Pusat, Indonesia 10160 Email : customercare@electrolux.co.id WA : 0811.8339.777</p> | <p>Singapore Consumer Care Center Tel: +(65) 6727 3699 Electrolux Sales Office and Service Center 351 Braddell Road, #01-04 Singapore 579713 Email : customer-care.sin@electrolux.com</p> |
| <p>Malaysia Consumer Care Center Tel: 1-300-88-1122 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam Seksyen 15, 40200 Shah Alam, Selangor, Malaysia Email : malaysia.customercare@electrolux.com</p> | <p>Thailand Consumer Care Center Tel: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor, 1910 New Phetch- aburi Road, Bangkok, Huai Khwang, Bangkok, Thailand 10310 Office Tel : (+66 2) 725 9100 Office Fax : (+66 2) 725 9299 Email : customercarethai@electrolux.com</p> |
| <p>Philippines Consumer Care Center Toll Free: 1-800-10-845-CARE(2273) Consumer Care Hotline: (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 7374757 Website : www.electrolux.com.ph Email : wecare@electrolux.com E Cook_Warr_Jul19</p> | <p>Vietnam Consumer Care Center Toll Free: 1800 588 899 Electrolux Vietnam Ltd. Unit 1&2, 10th Floor, Sofic Tower, 10 Mai Chi Tho Street ,Thu Thiem Ward, Thu Duc City, Ho Chi Minh City, Vietnam Office Tel : (+84 28) 3910 5465 Office Fax : (+84 28) 3910 5470 Email : vncare@electrolux.com</p> <p>Hongkong Consumer Care Hotline: +(852) 3193-9888 DCH Electrical Appliances Services Centre 4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong Email : customercare@dch.com.hk</p> |

