

TROUBLESHOOTING

Problem		Possible cause/action
After power is supplied, the power level display fails to light up.		<ul style="list-style-type: none"> • The plug is not inserted tightly. • The switch, socket, fuse and power cord are not in good condition.
The power level display lights up but heating does not start.		<ul style="list-style-type: none"> • The pot material is not suitable. • For other reasons, please contact your service technician.
Heating stops suddenly during operation.		<ul style="list-style-type: none"> • The ambient temperature is too high. • The air inlet or outlet is blocked. • The voltage is outside the range of this appliance. • The timing period has reached. • The system protection functions and is conducting energizing test.
Code of failure.	E3, E6	Wait a few minutes for the temperature of the appliance to become normal. Press the power control button and the induction cooktop will operate as usual.
	E7, E8	Wait a few minutes. When the voltage is back to normal, the induction cooktop will operate as usual.
	E1, E2, E4, E5, Eb, EC	Please contact your service technician.