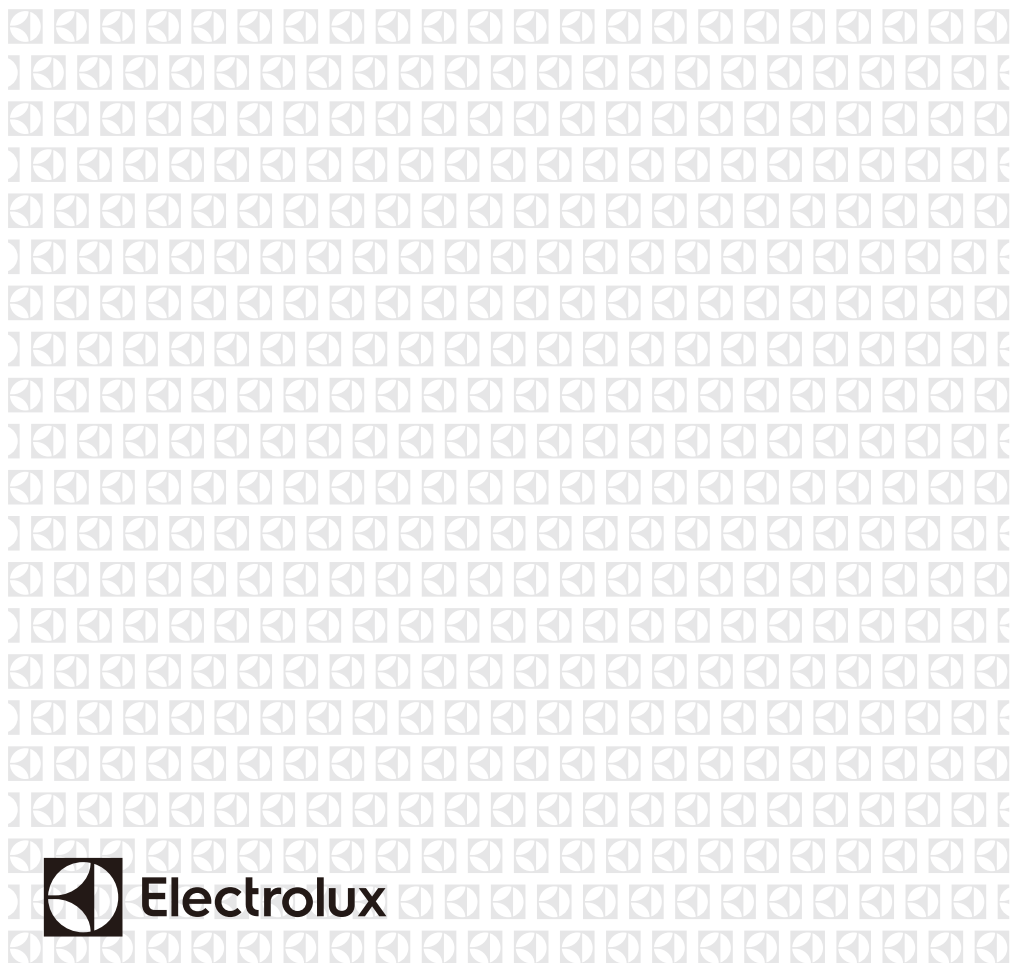


ECI9455S

EN Cooker hood

User Manual

1



Electrolux

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

BEFORE USING YOUR APPLIANCE

Before you use the rangehood, we recommend that you read through the whole user manual which provides the description of the rangehood and its functions. To avoid the risks that are always present when you use an electrical appliance, it is important that the rangehood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

RECORD MODEL AND SERIAL NUMBER HERE:

Model: _____

Serial NO: _____

CONTENTS

- 3 **Safety information**
- 4 **Product description**
- 5 **Dimensions**
- 6 **Rangehood installation**
- 9 **Using the rangehood**
- 10 **Maintenance and cleaning**
- 11 **Troubleshooting**
- 12 **Consumer Care Center**

LEGEND



WARNING!

This symbol indicates information concerning your personal safety



CAUTIONS!

This symbol indicates information on how to avoid damaging the rangehood.



IMPORTANT!

This symbol indicates tips and information about use of the rangehood.



ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the rangehood.

RoHS Compliant.

If at any time in future you need to dispose of this product please do Not dispose of this product with household waste, please send this product to collecting points where available

This product is RoHS compliant.

SAFETY INFORMATION

This manual explains the proper use of your new Electrolux canopy rangehood. Please read this manual carefully before using the product. This manual should be kept in a safe place for handy reference.

This rangehood is a domestic appliance which has been manufactured and tested to comply with International Standard IEC 60335.2.31.

Read the following carefully to avoid damage or injury.



This symbol indicates never to do this



This symbol indicates always do this



WARNING!

Follow these instructions carefully to avoid an electric shock or fire.

- | | |
|---|---|
| ⊘ | Young children should be supervised to ensure they do not play with the rangehood. |
| ⊘ | This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. |
| ⊙ | Ensure the rangehood is switched off before carrying out maintenance, to avoid any possibility of electric shock. |
| ⊘ | Never carry out flambe cooking under the rangehood. |
| ⊘ | This rangehood is not recommended for barbecues. |
| ⊘ | This rangehood cannot be installed for external use. |
| ⊙ | Grease filters must be removed every four weeks (maximum) for cleaning to reduce the risk of fire. |
| ⊘ | The exhaust from the rangehood must not be discharged into any heating flue, which may carry combustion products from other sources. (Fig. 1) |
| ⊘ | The exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose. |
| ⊙ | There must be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels. |
| ⊙ | Always cover lit gas burners with pots or pans when rangehood is in use. |
| ⊙ | Always switch off gas burners before you remove pots or pans. |
| ⊘ | Do not leave lit gas burners exposed due to the risk of fire. (Fig. 2) |

Electrical connection

Check that the mains voltage matches with the voltage on the data plate inside the rangehood. Check that the installation complies with standards of local building, gas and electrical authorities. Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the rangehood. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

Safety warnings For the installer

When installing the rangehood, make sure you adhere to the minimum and maximum distances from the rangehood base to the hob surface (as per table on page 6).

Exhaust flue installation: The following rules must be strictly followed to obtain optimal air extraction.

- Keep exhaust flue short and straight
- Do not reduce the size or restrict exhaust flue.
- Keep bends in the exhaust flue to a minimum.
- When using flexible flue always install duct with helix pulled taut to minimise pressure loss.
- Failure to observe these basic instructions will drastically reduce the performance and increase the noise levels of the range hood.

Exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose. The exhaust from the cooker hood must not be discharged into any heating flue, which may carry combustion products from other sources.

NOTE: Some installations may require the telescopic exhaust cover to be cut to length. Cut with sharp tin snips or a fine-tooth hack saw blade, taking care not to distort or dent the exhaust cover.

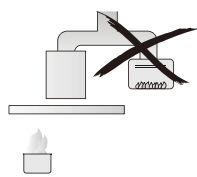


Fig. 1



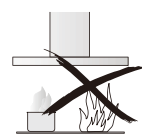


Fig. 2

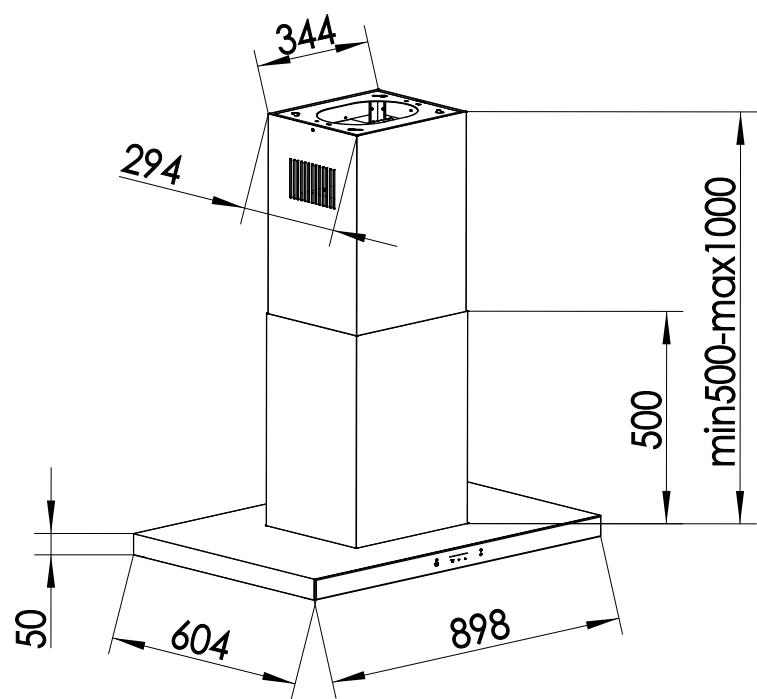DIMENSIONS



PRODUCT DESCRIPTION

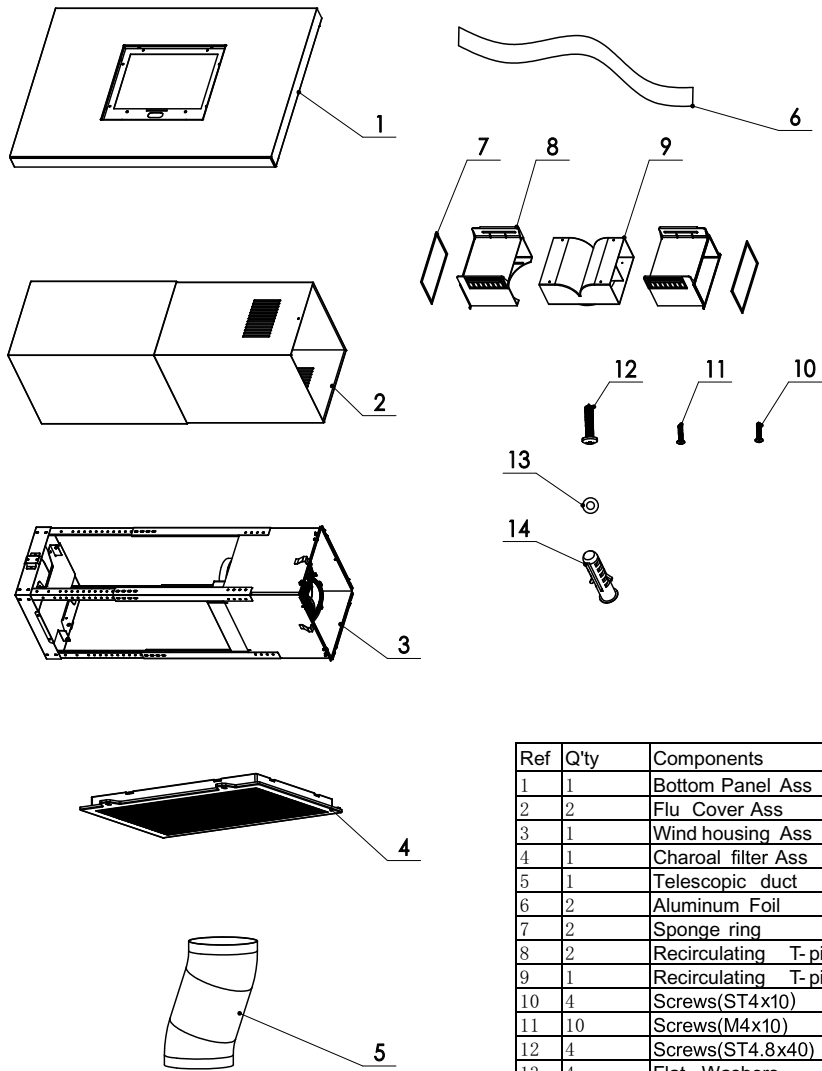

Ref	Q'ty	Components
1	1	Bottom Panel Ass
2	2	Flu. Cover Ass
3	1	Wind housing Ass
4	1	Charcoal filter Ass
5	1	Telescopic duct
6	2	Aluminum Foil
7	2	Sponge ring
8	2	Recirculating T-pieces
9	1	Recirculating T-pieces
10	4	Screws(ST4x10)
11	10	Screws(M4x10)
12	4	Screws(ST4.8x40)
13	4	Flat Washers
14	4	Plastic expansion plug

INSTALLING THE HOOD

1. Unscrew 16 screws between the two sections of the structure. Adjust extension of the hood support structure (dimension A). "Dimension A" represents the height from the top of upper bracket to the top of lower bracket, as the final height of the hood depends on this, and remember that with installation completed to the hood must be at least 650mm above the cooktop(Fig.2)

Fig.1



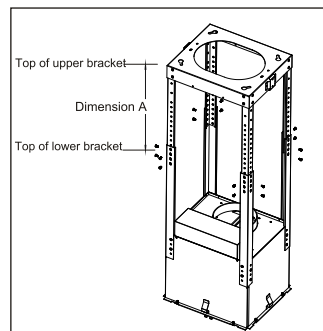


Fig.2

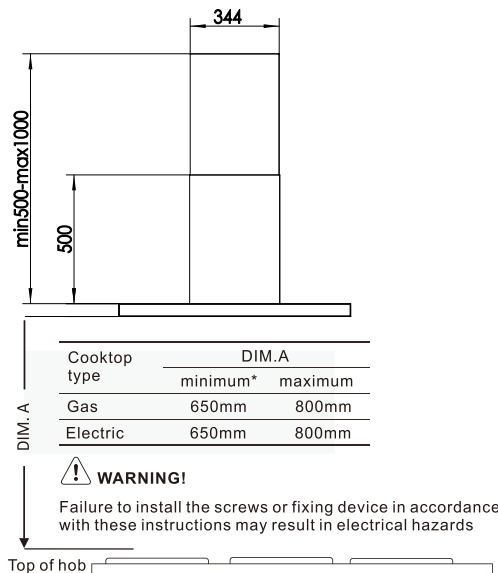

2. Fix the two sections of the structure using 16 screws(Fig.3).

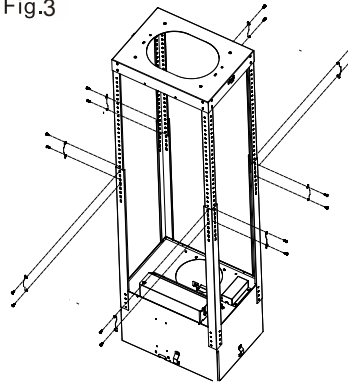Fig.3



3. Place the ceiling hole diagram directly above the cook-top(the center of the diagram must match the center of the cook-top and the edges must be parallel to the sides of the cook-top) (Fig.4)
4. Drill as shown(4 plugs). Screw 4 hood mounting screws leaving a space of about 5mm between the screw head and the ceiling. (Fig.4)
5. Fix an exhaust pipe inside the truss and connect it to the motor compartment connection ring. (Fig.4)
6. Insert the top chimney into the truss, secure it with two screws. Insert the bottom chimney in its seat so that it completely covers the motor compartment and electrical connection box. (Fig.5)
7. Hook the hood body onto the truss, ensuring it fits properly, secure the body to the truss with 8 screws then tighten it. (Fig.5)
8. Tighten the 4 hood mounting screws.
9. Remove the wire Cover within the body, Connect as shown the wire terminal and the controller terminal. Ensure the Wire Cover secure firmly with two screws.
10. Connect the power source and turn the mains power check for correct hood operation.

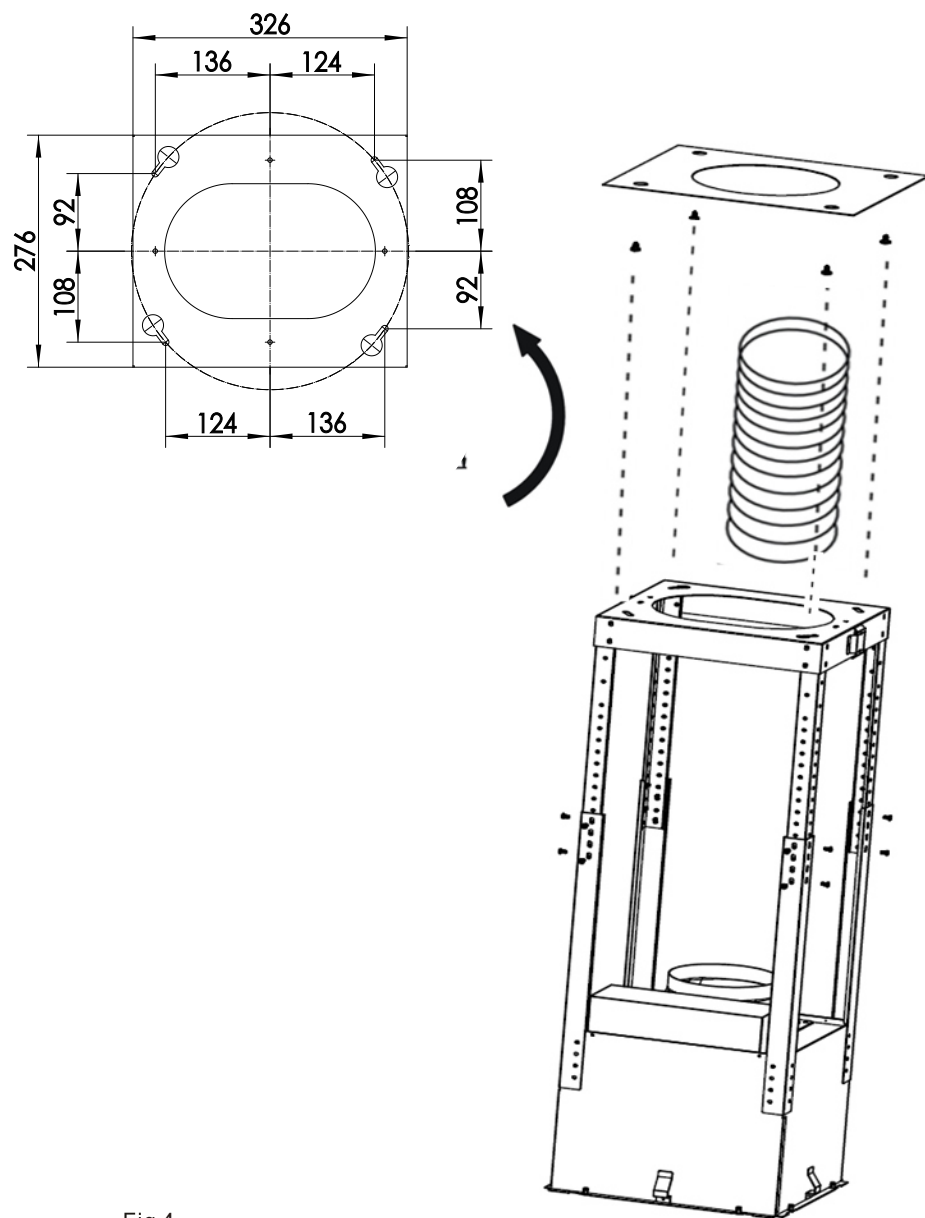


Fig.4

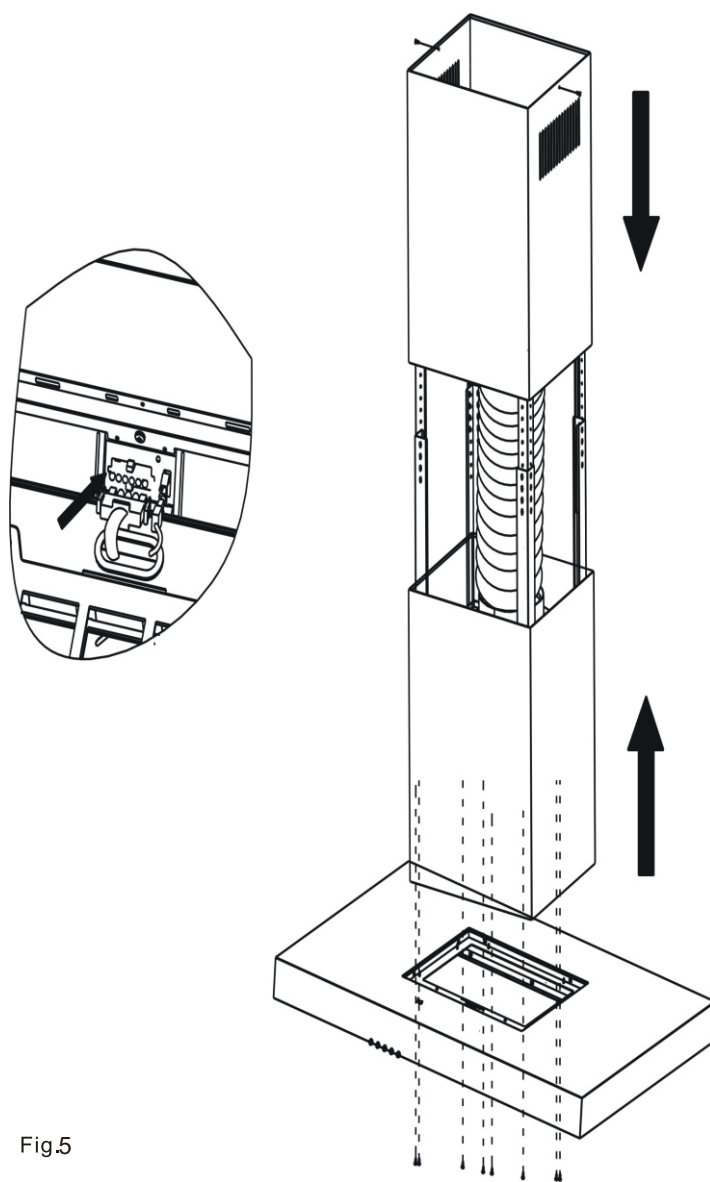


Fig.5

INSTALLING HOOD IN RECIRCULATING MODE

- Fix the recirculation plate to mounting plate with 4 supplied short screws. Fix the recirculation box with 8 supplied short screws as Fig 6.
- Insert one side charcoal filter into the hood body, and lock the other side by two screws as Fig 7.

Fig.6


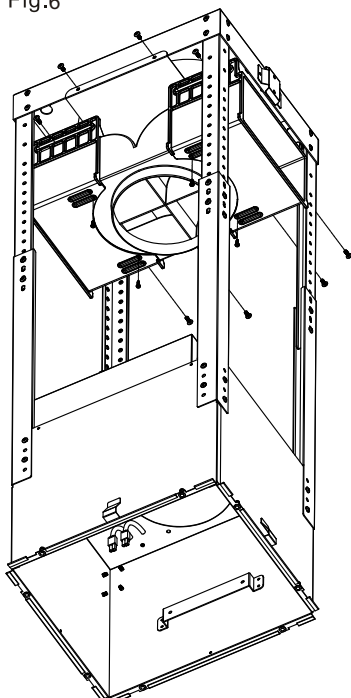



Fig.7

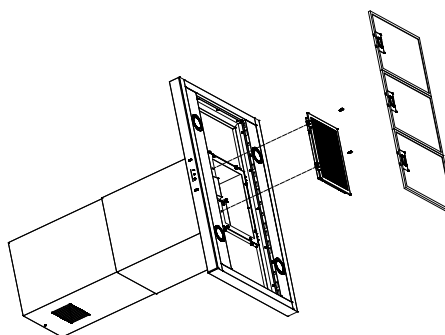




ELECTRICAL CONNECTION


- Electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards. Turn off electrical power at service entrance before wiring.
- If the power cord is damaged, it must be replaced by manufacturer, its agent or similarly qualified persons in order to avoid hazard.
- Do not use the plug and an extension cord other than the ones initially supplied with the hoods.
- The earthing of this hood is compulsory. Do not remove the ground prong of the plug.

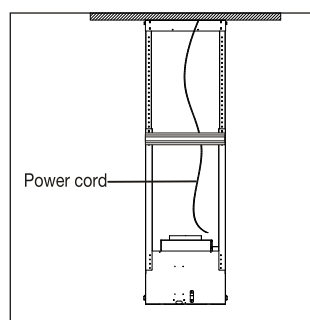







 

Fig.8



OPERATION

Press one of the speed  /  /  button to turn the appliance on.



Button	Function
	Press button  to turn on or turn off the model.
	Press button  for low speed.
	Press button  for medium speed.
	Press button  for high speed.
	Press button  to turn on or turn off the light.

LED LAMPS

Max Wattage:2 W
Voltage range:12V

WARNING: Always switch off the electrical supply before carrying out any operation on the appliance. This LED lamp should be replaced with qualified person.

CLEANING AND MAINTENANCE

Cleaning

DANGER

Always switch off the electricity supply at the breaker box during installation, cleaning, or maintenance.

NOTE

The efficiency of the range hood depends on the cleanliness of the intake and filters. Grease should not be allowed to accumulate on hood or filter.

- Clean the appliance in the following intervals:

Regularly	Use a soft cloth moistened with hand-warm mildly soapy water or household cleaning detergent. Never use metal pads, chemical, abrasive material or stiff brush to clean the appliance.
Monthly	Aluminum filter: The filter collects grease, smoke and dust so the filter is directly affecting the efficiency of the range hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent. The filter is dishwasher safe. Recirculation box: clean the ventilation openings on the top sides.
Every 4 - 6 months	Charcoal filters: <ul style="list-style-type: none">• If the model is not vented to the outside, the air will be recirculated through disposable charcoal filters that help remove smoke and odors.• The charcoal filters cannot be cleaned, they must be replaced regularly (depending on range hood usage).• Note: Do not rinse or put charcoal filters in a dishwasher.• Note: Charcoal filters are not included with the range hood.

Maintenance

- User service-Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.

TROUBLE SHOOTING

Problem	Cause	Solution
Excessive vibration.	The appliance is not fixed properly on the brackets.	Take down the appliance and check it is properly fixed.
	The fan blade is damaged.	Switch off the appliance. Repair to be carried out by qualified service personnel only.
	The fan motor is not fixed tightly.	
Light on, but fan does not work.	The fan blade is jammed.	Switch off the appliance. Repair to be carried out by qualified service personnel only.
	The motor is damaged.	
Both light and fan do not work.	Light bulb broken.	Replace with a bulb with correct rating.
	Problem with electrical connection.	Check the electrical connection with an electrician.
Suction performance is not good.	Distance between the appliance and the cooking place too large.	Readjust the distance.
	Metallic anti-grease filter is dirty.	Clean filters(see Cleaning and maintenance).
	Charcoal filter is dirty.	Charcoal filter(see Cleaning and maintenance).

CONSUMER CARE CENTER

<p>Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com</p>	<p>Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com</p>
<p>Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercare@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>Philippines Consumer Care Center Toll Free: 1-800-10-845-CARE(2273) Consumer Care Hotline:(+63 2)845-CARE(2273) Electrolux Philippines,Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West,Taguig, Philippines 1634 Trunkline:+63 2 737-4757 Website:www.electrolux.com.ph Email:wecare@electrolux.com</p>
<p>Vietnam Consumer Care Center Toll Free 1800-58-88-99 Tel: (+84 28) 39105465 Electrolux Vietnam Ltd. Unit 1&2, 10F Sofic Tower, #10 Mai Chi Tho Street, Thu Thiem Ward, Thu Duc City, Ho Chi Minh City, Vietnam</p>	<p>Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com</p>
<p>HONG KONG SERVICE HOTLINE: (+852) 3193 9888 DCH ELECTRICAL APPLIANCES SERVICE CENTRE 4/F, DCH BUILDING, 20 KAI CHEUNG ROAD, KOWLOON BAY, HONG KONG EMAIL: customercare@dch.com.hk WEBSITE: www.electrolux.com.hk</p>	

www.electrolux.com

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say, "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that we at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience the ultimate 21st century luxury: ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world.

The "Thinking of you" promise from Electrolux goes beyond meeting the needs of today's consumers. It also means we're committed to making appliances safe for the environment—now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at
www.electrolux.com

