


ETB2302J-A	ETB2302J-H	EBB2802K-A	EBB2802K-H
ETB2502J-A	ETB2502J-H	EBB3402K-A	EBB3402K-H
ETB2802J-A	ETB2802J-H	EBB3442K-A	EBB3442K-H
ETB3400K-A	ETB3400K-H	EBB3462K-A	EBB3462K-H
ETB3440K-A	ETB3440K-H	EBB3702K-A	EBB3702K-H
ETB3460K-A	ETB3460K-H	EBB3742K-A	EBB3742K-H
ETB3700K-A	ETB3700K-H	EBB3762K-A	EBB3762K-H
ETB3740K-A	ETB3740K-H		
ETB3760K-A	ETB3760K-H		

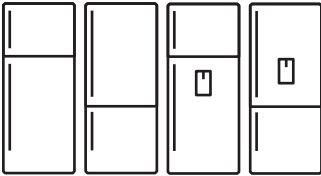

CONTENTS

1. SAFETY INFORMATION	3
2. DESCRIPTION OF THE APPLIANCE	5
3. CONTROL PANEL.....	19
4. INSTALLING YOUR NEW APPLIANCE	24
5. USING YOUR REFRIGERATOR	25
6. AUTOMATIC ICE MAKER	28
7. CLEANING YOUR REFRIGERATOR	29
8. FOOD STORAGE GUIDE	30
9. TROUBLESHOOTING	31
10. NOISES	33

WE'RE THINKING OF YOU

Thank you for choosing this Electrolux product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliance. Please spend a few minutes reading to get the very best from it.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

1. SAFETY INFORMATION



WARNING

Note: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your customer care centre. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

- It is essential the power point is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or moving it to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- Don't use a steam cleaner. If live components come into contact with condensing steam, they may short-circuit or cause an electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. If pressurised aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- Do not damage the refrigerant circuit.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- If you wish to discard this refrigerator, please contact your local authorities and ask for the correct method of disposal.

- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.



R600a refrigerant warning

This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.

- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- Leaking refrigerant may cause eye injuries or ignite.
- The room for installing appliance must be at least 1m³ per 8g of refrigerant. The amount of refrigerant in the appliance can be found on the rating plate inside the appliance.
- If you are unsure of the refrigerant check the rating plate inside the refrigerator compartment.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland Australia the Authorisation Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.




WARNING

Stable Footing

When your refrigerator is in place, you need to stabilise it. Lift the front of the refrigerator to take the weight off each stability foot and make small quarter turns to each foot until it is in firm contact with the floor. If you intend to move the refrigerator, remember to wind up each foot so that you can move it freely. Repeat the process of the foot adjustment once you have settled on the new location of the refrigerator.

Side View

Stabilising foot
wound down

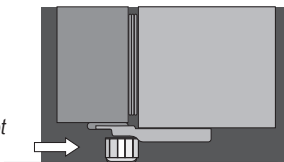

GENERAL WARNINGS

Read the following carefully to avoid damage or injury.

It is important to use your refrigerator safely. Check these safety points before using your refrigerator.

- The appliance must be plugged into its own dedicated electrical outlet.
- The plug must be accessible when the refrigerator is in position.
- It is essential the powerpoint is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Don't use extension cords or adapter plugs with this refrigerator.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug the appliance before cleaning and before changing the light bulb (when fitted) to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.


- Choose a location for your refrigerator that isn't too cold. The ambient room temperature should be above 10°C.
- Stand your refrigerator in a dry place avoid areas of high moisture or humidity.
- Don't put the refrigerator in frosty or unprotected areas like a garage or on the verandah.
- Don't plug your refrigerator into a timer fitted to the powerpoint.
- Do not put the refrigerator in direct sunlight, near stoves, fires or heaters.
- Do not put the refrigerator on an uneven surface.
- Do not store flammable materials on or under the appliance, e.g. aerosols.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator yourself, only use a qualified or authorised service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock
- When transporting and installing the refrigerator, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- When installed correctly, your refrigerator should:
 - Have adequate space at the back and sides for air circulation.
 - Be vertically aligned to the surrounding cupboards.
 - Have doors that will self-close from a partially open position.

NOTE: You must read these warnings carefully before installing or using the refrigerator. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

2. DESCRIPTION OF THE APPLIANCE

TOP MOUNT REFRIGERATOR FEATURES

- ETB2302J-A
 - ETB2302J-H
- ETB2502J-A
 - ETB2502J-H
- ETB2802J-A
 - ETB2802J-H

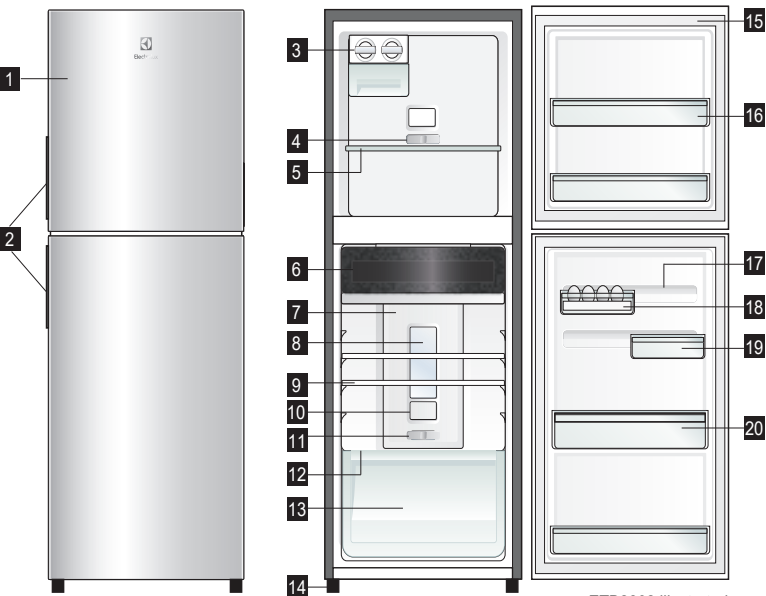


The details of the refrigerator feature:

- | | | | |
|----|-------------------------------|----|----------------------------|
| 1 | Doors | 11 | Slide Control Refrigerator |
| 2 | Door Handles | 12 | Humidity Slide |
| 3 | Ice Twist & Serve | 13 | Crisper |
| 4 | Slide Control Freezer Temp. | 14 | Feet |
| 5 | Freezer Shelf | 15 | Gaskets |
| 6 | TasteSeal Room | 16 | Door Bins |
| 7 | Multi Flow | 17 | FlexStor Rails |
| 8 | Refrigerator Light | 18 | Egg Tray |
| 9 | Shelves | 19 | FlexStor Bins |
| 10 | Deodoriser Cover Refrigerator | 20 | Bottle Bins |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3400K-A
- ETB3400K-H

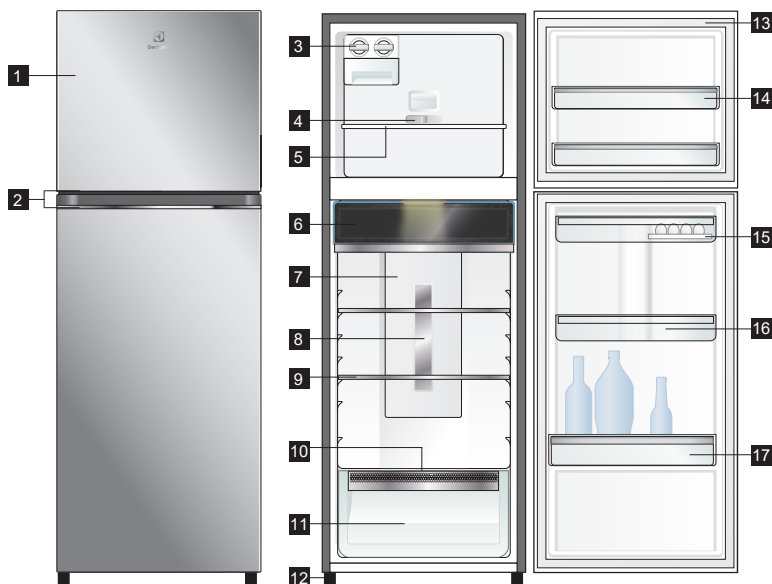

ETB3400 illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|-----------------------------|
| 1 Door | 11 Crisper |
| 2 Door Handles | 12 Feet |
| 3 Ice Twist & Serve | 13 Gaskets |
| 4 Slide Control Freezer Temp. | 14 Door Bins Shallow |
| 5 Freezer Shelf | 15 Egg Tray |
| 6 TasteSeal Room | 16 Door Bins Upper |
| 7 Multi Flow | 17 Bottle Bins |
| 8 Metal Cover | |
| 9 Shelves | |
| 10 Auto Humidity Control | |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3440K-A
- ETB3440K-H



ETB3440 illustrated


The details of the refrigerator feature:

- | | |
|--------------------------------------|---------------------------------|
| 1 Door | 11 Auto Humidity Control |
| 2 Door Handles | 12 Crisper |
| 3 Water Dispenser | 13 Feet |
| 4 Ice Twist & Serve | 14 Gaskets |
| 5 Slide Control Freezer Temp. | 15 Door Bins Shallow |
| 6 Freezer Shelf | 16 Water Tank |
| 7 TasteSeal Room | 17 Egg Tray |
| 8 Multi Flow | 18 Door Bin Upper |
| 9 Metal Cover | 19 Bottle Bins |
| 10 Shelves | |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3460K-A
- ETB3460K-H

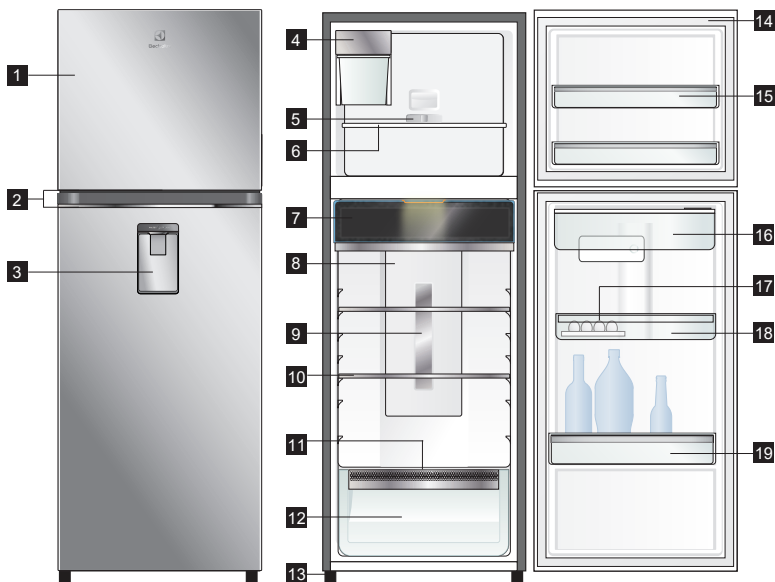

ETB3460 illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|---------------------------------|
| 1 Door | 11 Auto Humidity Control |
| 2 Door Handles | 12 Crisper |
| 3 Water Dispenser | 13 Feet |
| 4 Auto Ice Maker | 14 Gaskets |
| 5 Slide Control Freezer Temp. | 15 Door Bins Shallow |
| 6 Freezer Shelf | 16 Water Tank |
| 7 TasteSeal Room | 17 Egg Tray |
| 8 Multi Flow | 18 Door Bin Upper |
| 9 Metal Cover | 19 Bottle Bins |
| 10 Shelves | |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3700K-A
- ETB3700K-H



ETB3700 illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|-----------------------------|
| 1 Door | 11 Crisper |
| 2 Door Handles | 12 Feet |
| 3 Ice Twist & Serve | 13 Gaskets |
| 4 Slide Control Freezer Temp. | 14 Door Bins Shallow |
| 5 Freezer Shelf | 15 Egg Tray |
| 6 TasteSeal Room | 16 Door Bins Upper |
| 7 Multi Flow | 17 Bottle Bins |
| 8 Metal Cover | |
| 9 Shelves | |
| 10 Auto Humidity Control | |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3740K-A
- ETB3740K-H



ETB3740 illustrated


The details of the refrigerator feature:

- | | |
|--------------------------------------|---------------------------------|
| 1 Door | 11 Auto Humidity Control |
| 2 Door Handles | 12 Crisper |
| 3 Water Dispenser | 13 Feet |
| 4 Ice Twist & Serve | 14 Gaskets |
| 5 Slide Control Freezer Temp. | 15 Door Bins Shallow |
| 6 Freezer Shelf | 16 Water Tank |
| 7 TasteSeal Room | 17 Egg Tray |
| 8 Multi Flow | 18 Door Bin Upper |
| 9 Metal Cover | 19 Bottle Bins |
| 10 Shelves | |

Features may vary depending on model. Not all models will have features listed.

TOP MOUNT REFRIGERATOR FEATURES

- ETB3760K-A
- ETB3760K-H

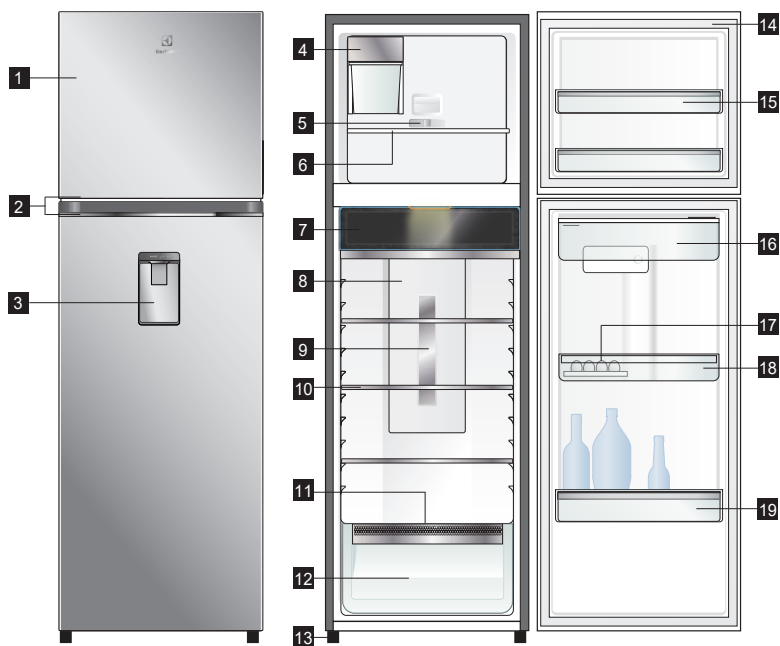

ETB3760 illustrated


The details of the refrigerator feature:

- | | |
|-------------------------------|--------------------------|
| 1 Door | 11 Auto Humidity Control |
| 2 Door Handles | 12 Crisper |
| 3 Water Dispenser | 13 Feet |
| 4 Auto Ice Maker | 14 Gaskets |
| 5 Slide Control Freezer Temp. | 15 Door Bins Shallow |
| 6 Freezer Shelf | 16 Water Tank |
| 7 TasteSeal Room | 17 Egg Tray |
| 8 Multi Flow | 18 Door Bin Upper |
| 9 Metal Cover | 19 Bottle Bins |
| 10 Shelves | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB2802K-A
- EBB2802K-H

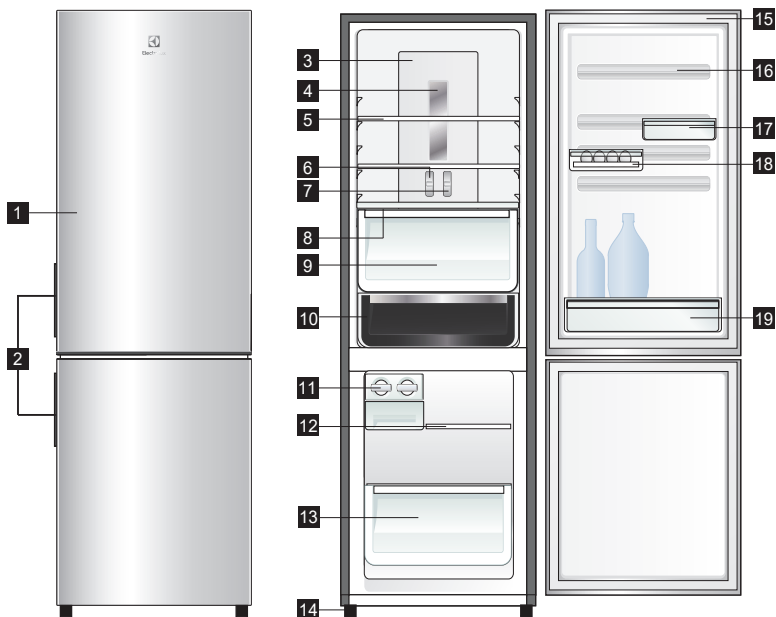

The details of the refrigerator feature:

- | | |
|---|-----------------------------|
| 1 Door | 11 Ice Twist & Serve |
| 2 Door Handles | 12 Freezer Shelf |
| 3 Multi Flow | 13 Freezer Crisper |
| 4 Refrigerator Light | 14 Feet |
| 5 Shelves | 15 Gaskets |
| 6 Slide Control Refrigerator Temp. | 16 FlexStor Rails |
| 7 Slide Control Freezer Temp. | 17 FlexStor Bins |
| 8 Humidity Slide | 18 Egg Tray |
| 9 Crisper | 19 Bottle Bins |
| 10 TasteSeal Room | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3402K-A
- EBB3402K-H




The details of the refrigerator feature:

- | | |
|--------------------------------------|--------------------------------|
| 1 Door | 11 Freezer Shelf |
| 2 Door Handles | 12 Freezer Drawer Lower |
| 3 Multi Flow | 13 Feet |
| 4 Shelves | 14 Gaskets |
| 5 Metal Cover | 15 Door Bin Dairy |
| 6 Slide Control Freezer Temp. | 16 Door Bin Upper |
| 7 Auto Humidity Control | 17 Egg Tray |
| 8 Crisper | 18 Bottle Bins |
| 9 TasteSeal Room | |
| 10 Ice Twist & Serve | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3442K-A
- EBB3442K-H

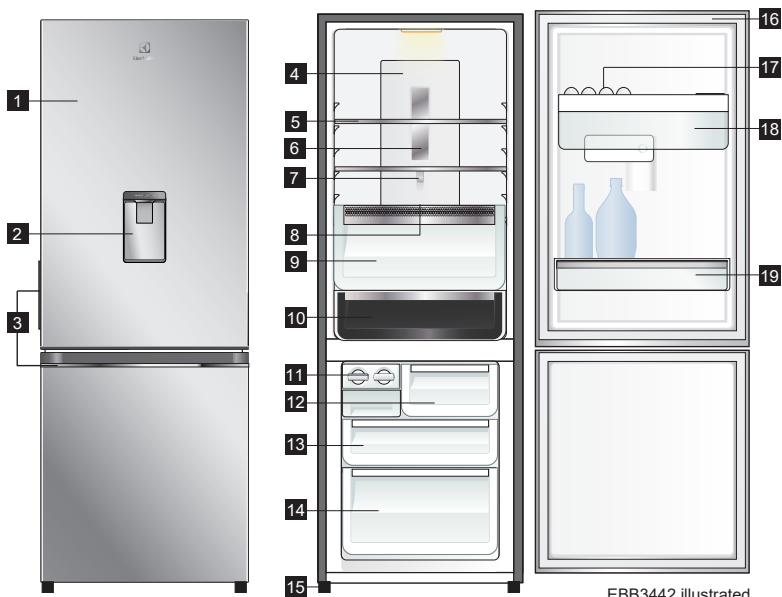

EBB3442 illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|-----------------------------|
| 1 Door | 11 Ice Twist & Serve |
| 2 Water Dispenser | 12 Drawer meat |
| 3 Door Handles | 13 Drawer Middle |
| 4 Multi Flow | 14 Freezer Crisper |
| 5 Shelves | 15 Feet |
| 6 Metal Cover | 16 Gaskets |
| 7 Slide Control Freezer Temp. | 17 Egg Tray |
| 8 Auto Humidity Control | 18 Water Tank |
| 9 Crisper | 19 Bottle Bins |
| 10 TasteSeal Room | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3462K-A
- EBB3462K-H



EBB3462 illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|---------------------------|
| 1 Door | 11 Auto Ice Maker |
| 2 Water Dispenser | 12 Drawer Meat Box |
| 3 Door Handles | 13 Ice Bin Large |
| 4 Multi Flow | 14 Freezer Crisper |
| 5 Shelves | 15 Feet |
| 6 Metal Cover | 16 Gaskets |
| 7 Slide Control Freezer Temp. | 17 Egg Tray |
| 8 Auto Humidity Control | 18 Water Tank |
| 9 Crisper | 19 Bottle Bins |
| 10 TasteSeal Room | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3702K-A
- EBB3702K-H



EBB3702 illustrated

The details of the refrigerator feature:

- | | | | |
|----|-----------------------|----|----------------------|
| 1 | Door | 11 | Freezer Shelf |
| 2 | Door Handles | 12 | Freezer Drawer Lower |
| 3 | Multi Flow | 13 | Feet |
| 4 | Shelves | 14 | Gaskets |
| 5 | Metal Cover | 15 | Door Bin Dairy |
| 6 | Slide Control Freezer | 16 | Door Bin Upper |
| 7 | Auto Humidity Control | 17 | Egg Tray |
| 8 | Crisper | 18 | Bottle Bins |
| 9 | TasteSeal Room | | |
| 10 | Ice Twist & Serve | | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3742K-A
- EBB3742K-H



EBB3742 illustrated


The details of the refrigerator feature:

- | | |
|--------------------------------------|--------------------------------|
| 1 Door | 11 Ice Twist & Serve |
| 2 Water Dispenser | 12 Freezer Drawer Meat |
| 3 Door Handles | 13 Freezer Middle |
| 4 Multi Flow | 14 Freezer Drawer Lower |
| 5 Shelves | 15 Feet |
| 6 Metal Cover | 16 Gaskets |
| 7 Slide Control Freezer Temp. | 17 Door Bin Dairy |
| 8 Auto Humidity Control | 18 Egg Tray |
| 9 Crisper | 19 Water Tank |
| 10 TasteSeal Room | 20 Bottle Bins |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR FEATURES

- EBB3762K-H

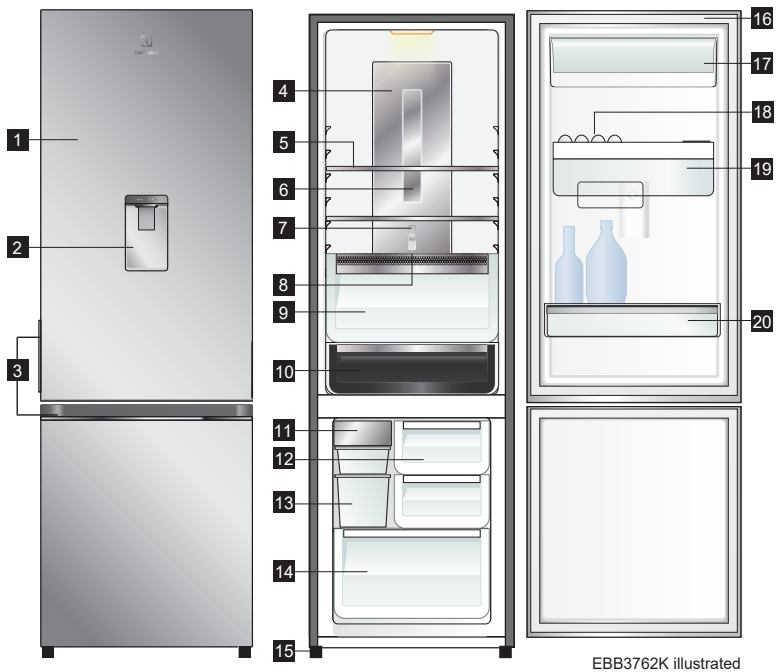

EBB3762K illustrated

The details of the refrigerator feature:

- | | |
|--------------------------------------|--------------------------------|
| 1 Door | 11 Auto Ice Maker |
| 2 Water Dispenser | 12 Drawer Meat |
| 3 Door Handles | 13 Bin Ice Large |
| 4 Multi Flow | 14 Freezer Drawer Lower |
| 5 Shelves | 15 Feet |
| 6 Metal Cover | 16 Gaskets |
| 7 Slide Control Freezer Temp. | 17 Egg Tray |
| 8 Auto Humidity Control | 18 Egg Tray |
| 9 Crisper | 19 Water Tank |
| 10 TasteSeal Room | 20 Bottle Bins |

Features may vary depending on model. Not all models will have features listed.

3. CONTROL PANEL

3.1 TEMPERATURE CONTROL

When you first turn on the refrigerator, set both the refrigerator and freezer temperature control to normal. Please refer to the below section for information on adjusting refrigerator and freezer temperature.



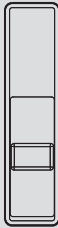
i When you set a temperature, you set an average temperature for the whole refrigerator cabinet.

Checking the softness of ice cream is a good indication that your freezer is the right temperature, while checking the temperature of water kept in the refrigerator is a good way of checking the temperature of the food compartment.

Temperatures inside each compartment may vary, depending on how much food you store and where you place it.

High or low room temperature may also affect the actual temperature inside the refrigerator.

When you change the temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.

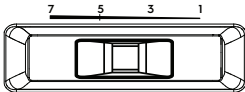DESCRIPTION	OPERATION / PRIMARY FUNCTION
<p>Top mount freezer</p> 	<p>Freezer temperature adjustment.</p> <ul style="list-style-type: none">- Select the refrigerator control.- Slide the control to the left to set it to colder (No.7).- Slide the control to the right to set less cold (No.1).
<p>Bottom mount freezer</p> <div><div><p>TASTESEAL Recommended</p><p>Refrigerator</p></div><div><p>Freezer</p></div></div>	<p>Refrigerator temperature adjustment.</p> <ul style="list-style-type: none">- Select the refrigerator control.- Slide the control up to set it to colder (No.5).- Slide the control down to set less cold (No.1). <p>Freezer temperature adjustment.</p> <ul style="list-style-type: none">- Select the refrigerator control.- Slide the control up to set it to colder (No.7).- Slide the control down to set less cold (No.1).

Recommended Freezer Setting


Room Temp.	Setting
Below 15°	7
Above 15°	5

Only install refrigerator indoors where the room temperature is above 10°

i Setting the freezer temperature to colder is not recommended for normal or very hot climate condition as this will limit the cooling capacity to other sections of the refrigerator. In very cold climate the freezer will need to be set colder.

3.2 ABOUT THE USER INTERFACE


- ETB3400K-A
 - ETB3400K-H
 - ETB3440K-A
 - ETB3440K-H
- ETB3700K-A
 - ETB3700K-H
 - ETB3740K-A
 - ETB3740K-H
- EBB3402K-A
 - EBB3402K-H
 - EBB3442K-A
 - EBB3442K-H
- EBB3702K-A
 - EBB3702K-H
 - EBB3742K-A
 - EBB3742K-H

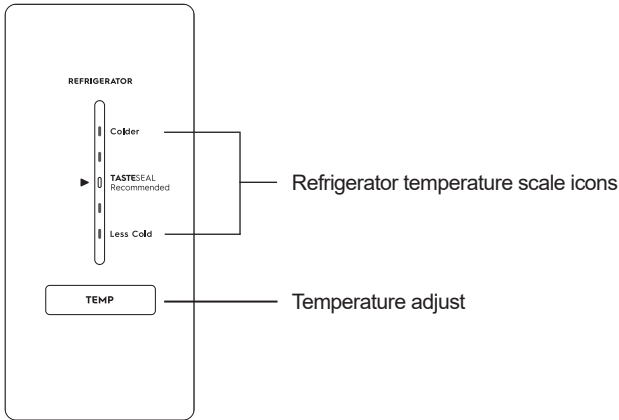

DESCRIPTION	OPERATION / PRIMARY FUNCTION
Refrigerator temperature scale icons	<ul style="list-style-type: none">• Indicates the temperature setting of the refrigerator compartment.
Temperature adjust	<p>Temperature Control</p> <ul style="list-style-type: none">• Touch the 'TEMP' button to awaken control.• Touch the 'TEMP' button to decrease the refrigerator temperature. There are 5 temperature settings indicated by the illumination sequence on the display. Once the coldest temperature is reached the display will return to the warmest setting with the next press.

ABOUT THE USER INTERFACE


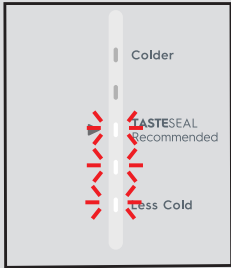
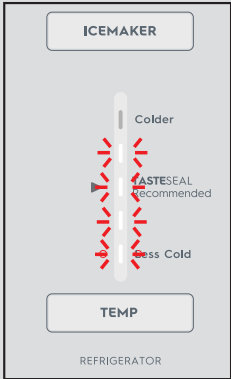
- ETB3460K-H
- EBB3462K-H
- ETB3760K-H
- EBB3762K-H

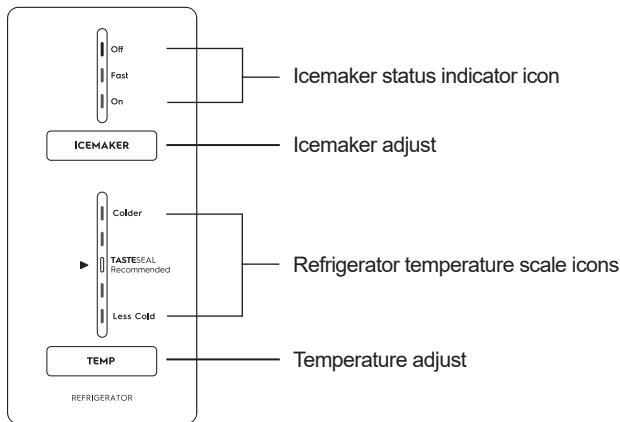



DESCRIPTION	OPERATION / PRIMARY FUNCTION
Icemaker status indicator icon	<ul style="list-style-type: none">• Show operation status.
Icemaker adjust	<ul style="list-style-type: none">• Select operation of icemaker. Touch the 'On' button to turn on Ice Maker. Touch the 'Off' button to turn off Ice Maker. Touch the 'Fast' button to activate Fast Ice.
Refrigerator temperature scale icons	<ul style="list-style-type: none">• Indicates the temperature setting of the refrigerator compartment.
Temperature adjust	<p>Temperature Control</p> <ul style="list-style-type: none">• Touch the 'TEMP' button to awaken control.• Touch the 'TEMP' button to decrease the refrigerator temperature. There are 5 temperature settings indicated by the illumination sequence on the display. Once the coldest temperature is reached the display will return to the warmest setting with the next press.

3.3 ERROR CODE & ALARMS

ERROR CODES

ERROR CODE	WHAT IT MEAN ...	WHAT TO DO ...
<p>Communication error</p> <p>LED_5 flashes with 1sec timing</p> 	<p>If you see the top temperature icon is flashing it means that the control has lost contact with the main control board.</p> <p>The appliance will operate at its last known setting, all auxiliary functions will not work.</p>	<p>Turn the unit off at the power point for 5 minutes and then turn it back on.</p> <p>Under most circumstances this will reset the display enabling normal function to continue.</p> <p>If the error re-occurs then call for service.</p>
<p>Sensor – Open Circuit / Short Circuit</p> <p><u>Non-icemaker</u></p> 	<p>If you see any combination of the first, second and third icons are flashing it means that an error has been detected on a sensor.</p> <p>The refrigerator will run in a default cycle to prevent food spoilage.</p>	<p>Call for service.</p>
<p><u>With icemaker</u></p> 	<p>If you see any combination of the first, second, third and fourth and all temperature icons are flashing it means that an error has been detected on a sensor.</p> <p>The refrigerator will run in a default cycle to prevent food spoilage.</p>	<p>Call for service.</p>

ALARMS

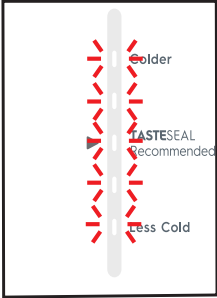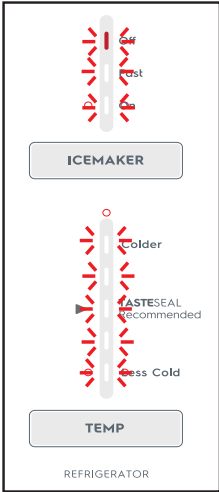ALARM ICON	WHAT IT MEANS	OPERATION
<p><u>Non-icemaker</u></p> 	<p>Activates if the refrigerator or freezer doors are left open for longer than 2 minutes.</p> <p>An alarm will sound and the affected compartment icon will flash and the temperature and icons will fade on and off.</p>	<p>Alarm will sound and icon will flash indicating which door is open.</p> <p>To silence the alarm for 8 minutes while the door is open press any button (the icons will continue to flash until door is closed).</p>
<p><u>With icemaker</u></p> 	<p>Activates if the refrigerator or freezer doors are left open for longer than 2 minutes.</p> <p>An alarm will sound and the affected compartment icon will flash and the temperature and icons will fade on and off.</p>	<p>Alarm will sound and icon will flash indicating which door is open.</p> <p>To silence the alarm for 8 minutes while the door is open press any button (the icons will continue to flash until door is closed).</p>

4. INSTALLING YOUR NEW APPLIANCE


Clean the refrigerator thoroughly according to instruction, and wipe away any dust that has accumulated during shipping.

Check that the floor is level. If it is not then adjust the provided levelling leg so product is level and stable.

We recommend that you let your refrigerator run for two to three hours before you put any food in it. This will allow you to check that it is operating properly and that enough cool air is going to the freezer.

Clearance around your Top and Bottom Mount refrigerator;

- Allow a minimum of 30mm clearance on both sides of the refrigerator.
- Allow 50mm clearance at the back of the refrigerator.
- Allow a minimum of 10mm clearance above the hinge cover.
- If you do not have a cupboard with allowance for air flow above the refrigerator, the recommended clearance area on top increases to 90 mm.
- When positioned in a corner area, spacing of at 350mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

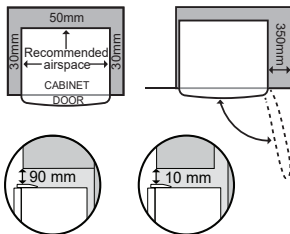


NOTE: In installation where both sides and the rear of the refrigerator are not enclosed by cabinetry eg the refrigerator is placed against a wall, the clearance between the rear of refrigerator and the wall should not be greater than 75mm.

Your refrigerator uses energy efficient components that may produce different noises (Refer "Noises" page for examples) to your old refrigerator. Occasionally a gurgling sound of refrigerator flowing or the sound of parts expanding and contracting can be hard. These noises are quite normal.

Installing your refrigerator


1. Roll the refrigerator into place. The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers. Before moving your refrigerator ensure height adjusting nut and the stability foot are fully wound up off the floor.
2. Wind the height adjusting nut under door hinge down until the refrigerator is tilted back by 10mm (see diagram).

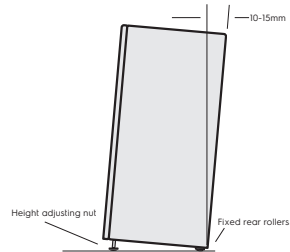

3. Wind the height adjusting nut on the handle side down until the refrigerator is level and stable. If you have difficulty winding the nut or height adjusting foot down, have someone tilt the refrigerator back so you have better access.



4. Check the alignment of the refrigerator to the surrounding cupboards to see if it is level. You can adjust the level as detailed in step 2 and 3.

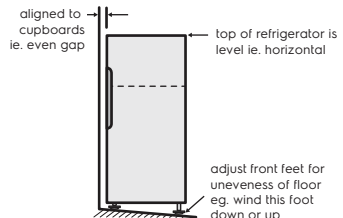

5. USING YOUR REFRIGERATOR

Refrigerators work by transferring heat from the food inside to the outside air. This operation makes the back and sides of the refrigerator feel warm or even hot particularly at

start-up and on warm days – this is normal. Avoid placing food against the air vents in the refrigerator as it affects efficient circulation. If the door is opened frequently, a light frosting will occasionally occur on the freezer's interior. This is normal and will clear after a few days. If the freezer door is accidentally kept open, a heavy frost will coat the inside walls and should be removed.


Your new refrigerator uses a high-speed compressor, along with other energy-efficient components, which may make unusual sounds and be more noticeable at night and quieter times. These sounds simply indicate your refrigerator is working how it should. They include:

- Compressor running noises;
- Air movement noise from the small fan motor;
- A gurgling sound, similar to water boiling;
- A popping noise, heard during automatic defrosting; and
- A clicking noise, prior to compressor start-up.

Further details can be found in the Troubleshooting Guide.

i For top mount refrigerators (where the freezer is on top of the fresh food compartment).

- Don't place food forward of the ribs on the freezer floor, as it will keep the door open.

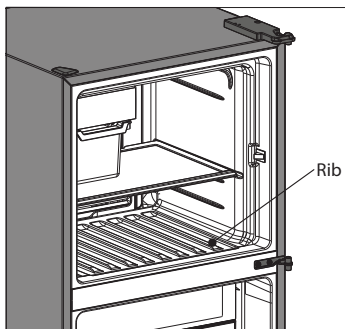


For bottom mount refrigerators (where freezer is below the fresh food compartment):

- Ensure all freezer drawer and shelves are pushed back completely to prevent them from keeping the door open

5.1 REMOVING FEATURES

5.1.1 AHC (Auto Humidity Control)


Auto Humidity Control automatically releases excess moisture and maintains optimal humidity for your fresh vegetables, maintaining the taste, texture and freshness.

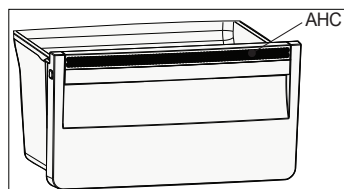

i Please contact our service provider when need to replace you filter

5.1.2 TASTESEAL Room


Use the **TASTESEAL** compartment to store meat, snack, beverage and dairy products. You can adjust **TASTESEAL** temperature by sliding the refrigerator temperature control.

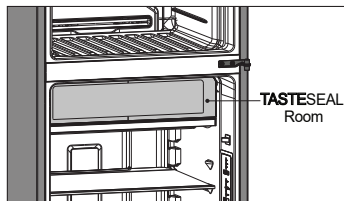

5.1.3 Metal Tray

Metal tray locate in **TASTESEAL** room and can lift off from plastic body for cleaning follow to instruction in this manual.

Avoid direct contact with food stuff that contain with highly acid or alkali and clean it immediately when found any stain

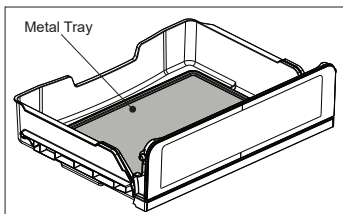


CAUTION

Do not use in hot cooking or oven cooking.

5.1.4 Door storage bins

Both the refrigerator and freezer have door storage bins.

You can adjust the refrigerator bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift and tilt to remove. To replace, tilt the top and push bin down until the support lugs lock it in place.

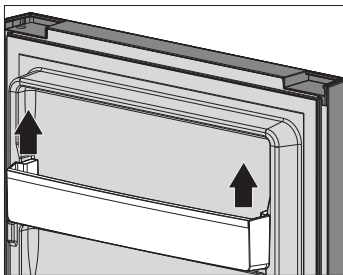

5.1.5 Crisper bin

- Storing vegetables


Use the crisper bin to store vegetables, fruits or small items. You can adjust the humidity inside the bin by sliding the humidity control.

- Storing fruits and small items

You can store fruits in the crisper bin, but do remember to lower the Auto Humidity Control the lever on the humidity control.


5.1.6 Crisper Drawer

- To empty food from the crisper. On some models it will be necessary to remove the bottle storage bins.
- Remove the crisper by pulling forward, then up and forward again.
- For top mount models, remove the crisper shelf by lifting the catches on the left and right underside of the shelf and pulling the shelf forward.

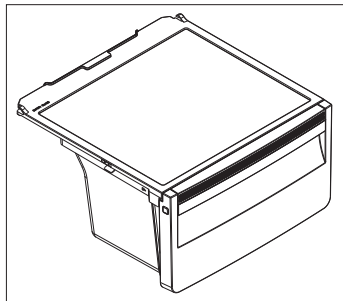

5.1.7 Deodorizer


Your refrigerator is fitted with FreshTaste Deodorizer to assist with the removal of food odours inside your refrigerator. Keeping the food covered and wrapping it in plastic will also help to reduce the odours inside your refrigerator.

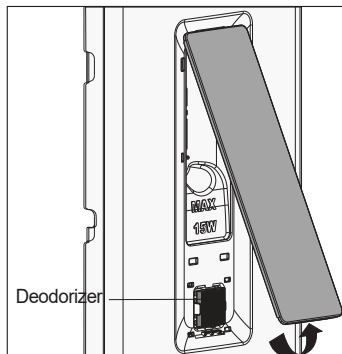

5.1.8 Glass Shelves

To remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

To return the shelf, make sure there is nothing behind that may obstruct movement. Gently push the shelf, into the cabinet and back into position.

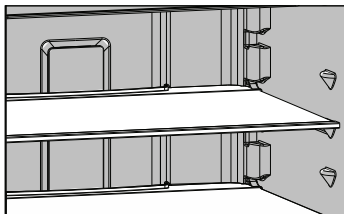

6. Automatic Ice Maker


The automatic ice making function pumps water from the water tank located in the refrigerator and dispenses it into the automatic ice maker in the freezer.

The ice will then be dropped into the ice bin located beneath the ice maker


If the water tank is empty or lower than level, the ice maker will automatically turn off after 3 attempts at pumping water from the tank. The ice maker indicator on the user interface shows the operational status of the ice maker (Refer control instructions).

Water Tank Refilling


Step 1. Open the lid at the top of the water tank.

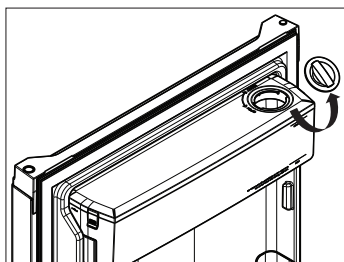

Step 2. Pour potable water through the lid at the top of the water tank.

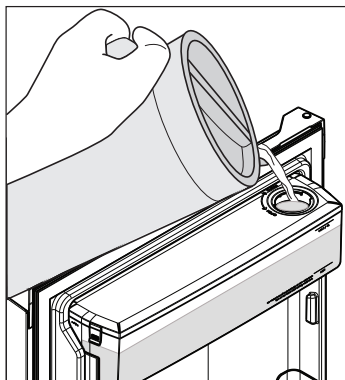

Step 3. the lid at the top of the water tank.

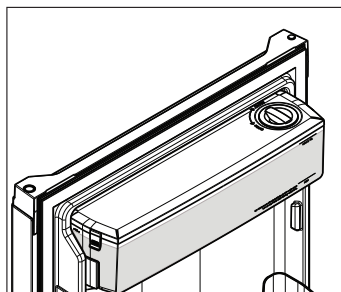

CAUTION

Do not fill the water tank with anything other than clean water (Filtered or Mineral water). Soft drink, juice, tea or hot water etc, can damage your automatic icemaker.

The water tank can withstand a maximum water temperature of 60°C.



Tips and Useful Information

Remove and clean ice bin and water tank once a month, discarding unused ice and water. This will ensure fresh ice and smooth operation of your icemaker.

Make sure your refrigerator is level to avoid uneven ice cubes.

7. CLEANING YOUR REFRIGERATOR



WARNING

BEFORE CLEANING: Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

Doors and exterior (white and silver):

You should only clean the doors with lukewarm soapy water and a soft cloth.



CAUTION

Never use stainless steel cleaners, abrasive pads or other cleaners that will scratch the surface. Damage to the appliance after delivery is not covered by your warranty.

Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water.

Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

Water Tank Assembly

Clean the inside of the water tank regularly with a soft cloth, unscented mild soap and rinse thoroughly with lukewarm water to completely remove any soap residue.




CAUTION

BEFORE REMOVE; to empty the water in the tank.

To remove the water tank follow these steps:

1. Press 2 clips on side of water tank to unlock water tank and hold on the tank.
2. Pull out the water tank.

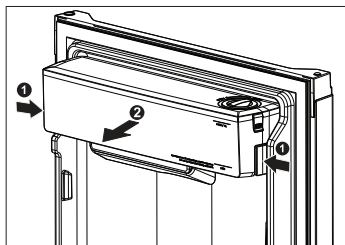

Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying.

Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.



CAUTION

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.

To clean a crisper or freezer bin with telescopic extension slides, simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould:

1. Remove all food.
2. Remove the power plug from the power point.
3. Thoroughly clean and dry the Interior.
4. Ensure that all the doors are wedged open slightly for air circulation.

8. FOOD STORAGE GUIDE

CATEGORY	PRODUCT	REFRIGERATOR	FREEZER	STORAGE TIPS
Meat	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.
	Cold Meats	3-5 Days	4-6 Months	Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
	Roasts	3-5 Days	12 Months	
Poultry	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out.
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
Seafood	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and crabs	1-2 Days	2 Months	
	Prawns	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
Dairy	Milk	7- 10 Days	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out.
	Yoghurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks – 2 Months	2 Months (Grated)	Depending on the variety hard cheese can last from 2 weeks to 2 months.
	Soft Cheeses	1-2 Weeks	Not Suitable	
	Butter	8 Weeks	12 Months	
Fruit & Vegetables	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				Don't wash fruit and vegetables before storing them in the refrigerator as this can make them susceptible to rotting.
Left Overs	Homemade meals	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meals in small portion sizes to limit wastage.

 **IMPORTANT**

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

9. TROUBLESHOOTING

Appliance does not operate at desired temperature

In a modern frost free refrigerator / freezer, cold air is circulated around the various compartments through air vents using a high efficiency fan.

CONCERN	WHAT TO DO
Refrigerator is too warm.	Ensure food is allowed to cool before placing inside the refrigerator. Ensure the appliance is set up as per instructions on page ?? Ensure that contents are not obstructing the cooling vents. Ensure the door is not held open or is being opened too frequently.
Freezer is too warm.	Adjust temperature to a colder setting. Ensure food is allowed to cool before placing inside the freezer. Ensure the appliance is set up as per instructions on page ?? Ensure that contents are not obstructing the cooling vents. Ensure the door is not held open or is being opened too frequently.
Food is freezing in the refrigerator.	Adjust temperature to a warmer setting. Ensure that fruit and vegetables are stored in the crisper. Items with a high water content should not be placed near the cooling vents.
Unable to change temperature settings.	Refer to function guide in Controlling Your Refrigerator. Ensure that user interface is in "awake" mode before trying to adjust temperature settings.

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making

CONCERN	WHAT TO DO
Motor noise (compressor).	Nothing. This is normal as your new refrigerator uses a variable speed compressor and fan that at start up and on warm days runs at a high speed to provide additional cooling. When less cooling is required the compressor and fan will run at a lower speed Note that the compressor noise may seem louder at the start of the on cycle.
A clicking noise heard just before the compressor starts.	Nothing. This is normal as your new refrigerator has an automatic switching action of the temperature control, turning the compressor on and off.
Occasional gurgling, similar to water boiling.	Nothing. As each refrigeration cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your refrigerator system.
Airflow noise.	Nothing, this is normal as your new refrigerator uses high efficiency fans to circulate air. Fan speed and noise may increase during periods of heavy usage or hot weather.
Rattling and other noises.	Ensure that the cabinet is level and stable, refer to Installation Instructions on page ??. Check the surrounds of the appliance to ensure there is nothing touching or placed on top of the appliance. Ensure that contents of the appliance are not placed in such a way that they are vibrating (such as bottles).

Refrigerator operation

CONCERN	WHAT TO DO
When your appliance is not operating	<p>Check that the power cord is plugged into the power outlet properly and that the outlet is switched on.</p> <p>Try adjusting the temperature control to a slightly colder position.</p> <p>Try running another appliance from the same power outlet. If no power is coming out from the outlet, you may have a blown fuse or tripped your household power supply circuit.</p> <p>It is normal for the freezer fan to NOT operate during the automatic defrost cycle or for a short time after the refrigerator is turned on.</p>
When there is refrigerator noise	<p>Your refrigerator uses energy efficient components that may produce different noises from your old refrigerator.</p> <p>Occasionally, a gurgling sound of the refrigerant flowing or the sound of parts contracting or expanding may be heard.</p> <p>These sounds are quite normal. If the refrigerator is rattling or making vibrating noises, check that it is level and adjust levelling foot.</p>
If there are odours inside the refrigerator	<p>The interior may need cleaning.</p> <p>Some foods may produce strong odours and need to be tightly sealed.</p>
If the temperature in the refrigerator is too warm	<p>Check that the refrigerator has enough clearance at the sides, back and top. Refer to the installation instructions in this manual.</p> <p>Refer to 'Temperature Control' section.</p> <p>The door may have been opened for too long or too frequently.</p> <p>Food containers or packaging may be holding the door.</p>
If the temperature in the refrigerator is too cold	<p>Refer to 'Temperature Control' section</p> <p>Increase the temperature to avoid high energy consumption.</p>

10. NOISES

Appliance noise

Your new refrigerator may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, like the floor, walls and cabinets, can make the sounds seem louder than they actually are. The following describes the kinds of sounds and what may be making them.

