



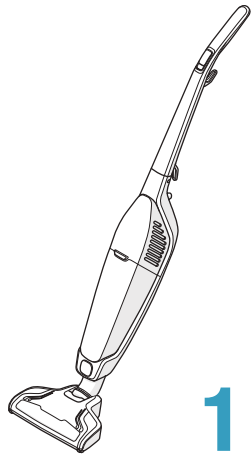


Electrolux

Dynamica
Dynamica Pro
Dynamica Pro Plus

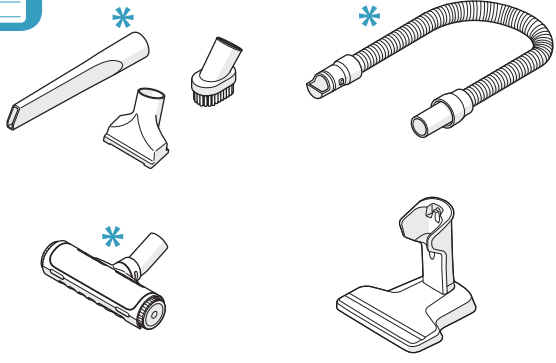


1


* Applies to certain models only | 僅適用於特定型號 | 仅适用于特定型号 | Berkenaan dengan model tertentu saja | Chỉ áp dụng cho một số kiểu máy | ใช้กับเครื่องใช้ไฟฟ้าบางรุ่นเท่านั้น | 특정 모델에만 적용

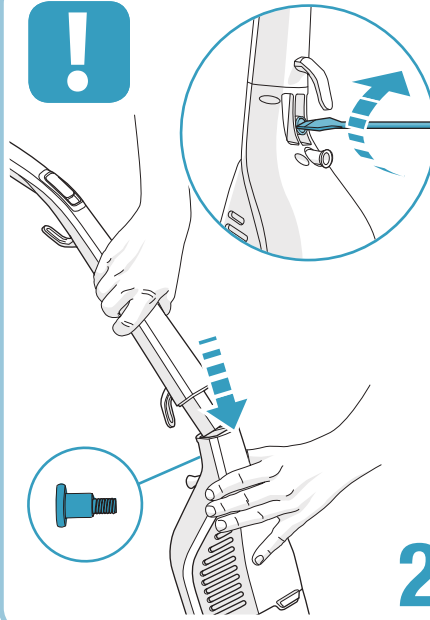



2

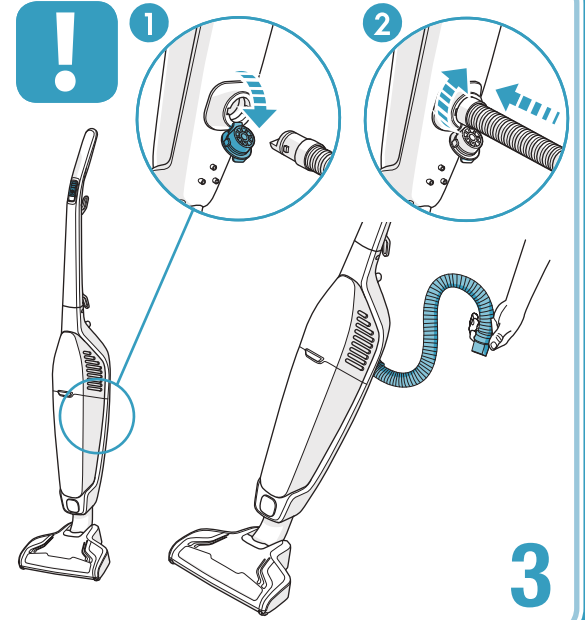


3

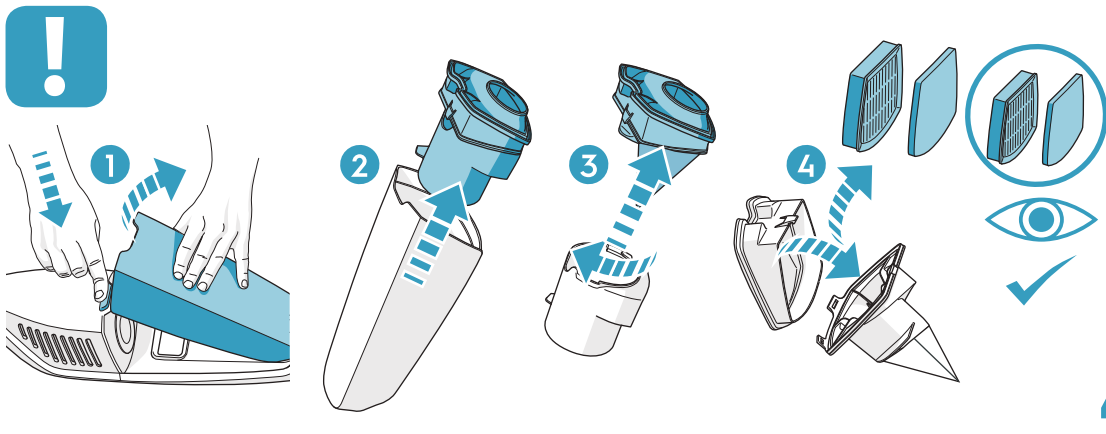



4

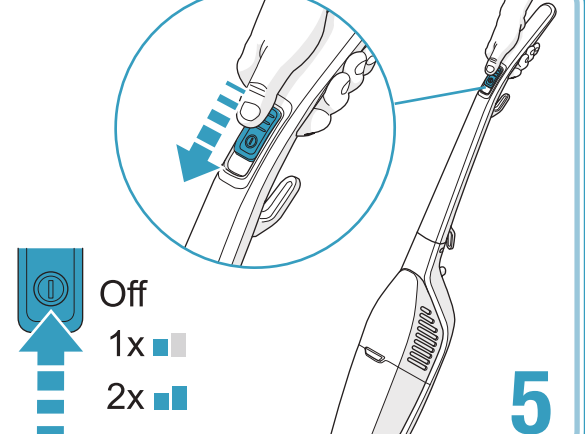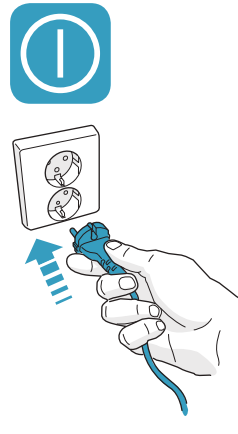

5


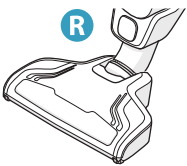


R


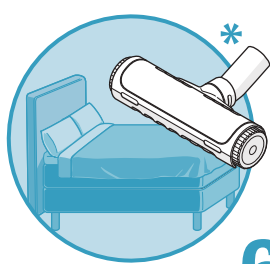
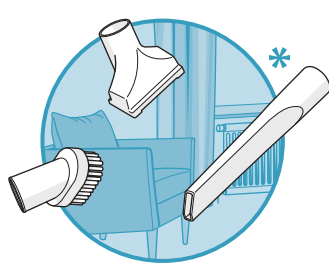


6


R Recommended nozzle | 推薦吸頭 | 推荐喷嘴 | Nosel yang disarankan | đầu hút được khuyến nghị | หัวดูดพื้นแนะนำ | 권장 노즐

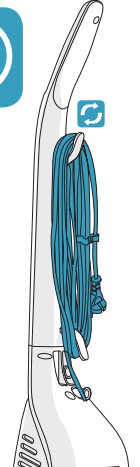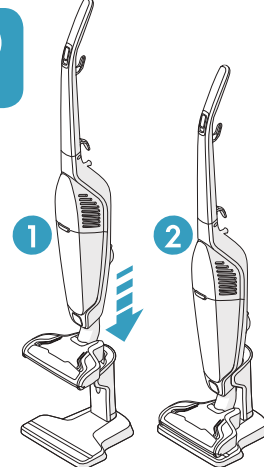

7

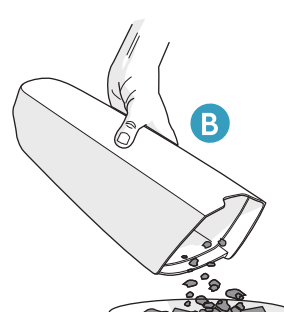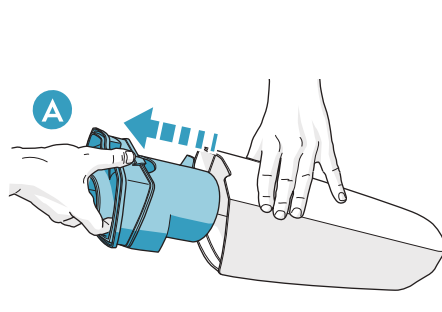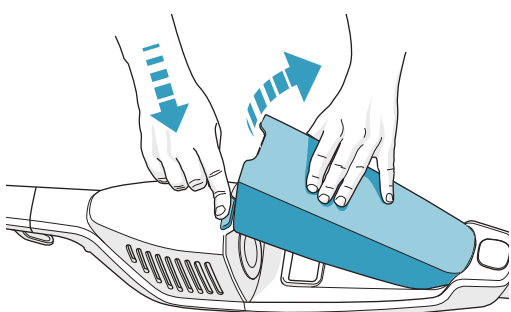

8

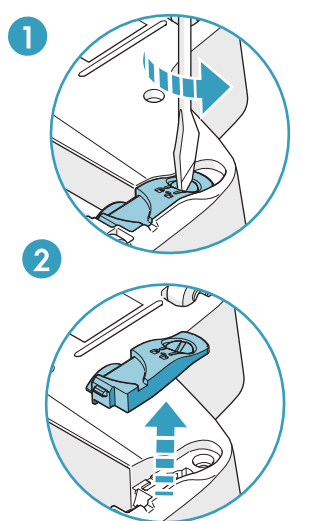



2

3


1

2

3

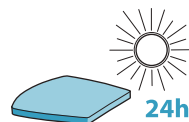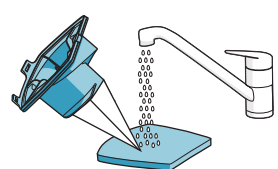


24h

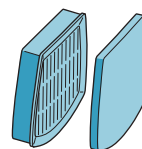

ref: EF 153

9

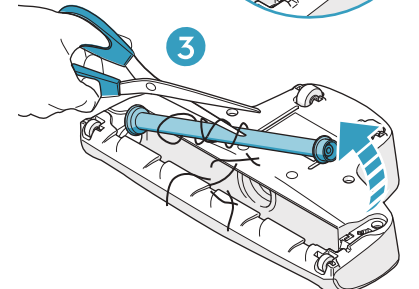

10

